SERVICE MANUAL

SM0064

Mod. PD1 A

CMP4121HDE
CMP4202E
42PMA400E

Caution

Be sure to read this manual before servicing. To assure safety from fire, electric shock, injury, harmful radiation and materials, various measures are provided in this Plasma display.
Be sure to read cautionary items described in the manual to maintain safety before servicing.

Serviceman Warning

1. Since Panel Module and Front Filter are made of glass, handling of the broken Module and Filter shall be handled carefully in order not to be injured.
2. Replacment work shall be started after the Panel Module and the AC/DC Power supply become sufficiently cool.
3. Special care shall be taken to the display area in order not to damage its surface.
4. The Panel Module shall not to be touched with bare hand to protect its surface from stains.
5. It is recommended using clean soft gloves during the replacment work in order to protect not only the display area of the Panel Module but also the serviceman himself.
6. The Chip Tube of Panel Module (located upper left of the back) and flexible cables connecting Panel glasses to drive circuit PWBs are very weak, so sufficient care should be taken so as not to break them. If you break the Chip Tube, the Panel will not display any more.

Contents

1. Features·····2
2. Specifications·····2
3. Lead free solder·····3
4. Names of each part·····4
5. Trouble shooting·····5
6. Block diagram·····14
7. Disassembly Diagram·····15
8. Re-Adjustment ·····18
9. Wiring Drawing·····22
10. Replacement Parts list·····24

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT.

Plasma Display

October 2002

1. Features

- 42 inches Hi-Vision compatible high-definition color plasma display panel.
- Newly developed Multi-scanning converter provides a multi-scan coverage of TV signals through to PC analog signals (15 kHz to UXGA(107 kHz)).
- Large high-quality display images free from color miss-convergence and display distortion, as well as from geomagnetic effect and the magnetic effect of ambient power lines.
- Multimedia input support
  Two minis D-sub terminal have been provided for RGB input. It is possible to switch between RGB signals and component signals* from the Menu screen or the remote controller, therefore use is possible with equipment ranging from personal computer to imaging device.
  *It is possible when the VIDEO unit is inserted.

2. Specifications

PDP Module		42 inch ALIS PDP panel (aspect ratio 16:9) Description FPF42C128128UB Pixel pitch 0.90 mm(H) x 0.51 mm(V) Pixel structure RGB striped
Input Signal	***RGB 1*** ***RGB 2*** (mD-sub15p) x 2	Video : 0.7 Vp-p Sync. : Separate H/V, TTL level Composite H/V, TTL level Sync. on Green at 0.30 Vp-p *: A Component input is attained at a D-sub terminal.
	Video 1 (RCAx1, S-terminalx1)	***Composite Video or S-video (forS1, S2)*** NTSC3.58, NTSC4.43, PAL, M-PAL, N-PAL, PAL60,SECAM Video : Composite 1.0 Vp-p S-video Y: 1.0 Vp-p, C:0.29Vp-p Sync. : Composite sync
	Video 2 (RCAx3)	***Component Video*** Y,PB,PR or Y,CB,CR: (480I, 480P, 576I, 576P, 720P, 1080I, 1035I) Video: Y : 1.0 Vp-p Pb/Cb,Pr/Pr : 0.7 Vp-p Sync. : Superimposed with Y signals
	SCART (VIDEO1,VIDEO2)	PAL,NTSC Video : R/G/B 0.7Vp-p (Video2) Sync : Composite Sync 1.0Vp-p (Video1)
Output Signal	***Video 1*** (RCAx1)	***Composite Video*** Loop-through of input video 1 signal
Colors		16.777 million
Synchronization		Horizontal : 15 –107 kHz Vertical : 50 – 85 Hz
Resolution		Horizontal : 1024 dots (max.) Vertical : 1024 lines (max.)
Viewable Image Size		42 inches (1060 mm), diagonal (typical)
Viewable Image Area		Horizontal : 922 mm (typical) Vertical : 522 mm (typical)
Color Temperature		1: Cool 2: Normal 3: Warm 4:User
Warm-up Time		30 minutes to reach optimum performance level.
Power Supply		AC 100 - 120 / 200 – 240 V (3.7A /2.0A) 50/60 Hz (automatically selected) Power Consumption : 350 W (typical, without sound) (provided with power save circuit.)
Dimensions		1030 (W) × 636 (H) × 89 (D) mm
Weight		31 kg (approx.) exclude option stand
Environmental Condition		Operation / Storage Temperature 5ºC to 35ºC / −15ºC to 60ºC Humidity 20% to 80% / 20% to 90%

3. Lead free solder

This product uses lead free solder (unleaded) to help preserve the environment. Please read these instructions before attempting any soldering work.

Caution: Always wear safety glasses to prevent fumes or molten solder from getting into the eyes. Lead free solder can splatter at high temperatures (600 ℃)

■ Lead free solder indicator

Printed circuit boards using lead free solder are engraved with an "F."

■ Properties of lead free solder

The melting point of lead free solder is 40-50 ℃ higher than leaded solder.

■ Servicing solder

Solder with an alloy composition of Sn-3.0Ag-0.5Cu or Sn-0.7Cu is recommended.
Although servicing with leaded solder is possible, there are a few precautions that have to be taken. (Not taking these precautions may cause the solder to not harden properly, and lead to consequent malfunctions.)

Precautions when using leaded solder

- Remove all lead free solder from soldered joints when replacing components.
- If leaded solder should be added to existing lead free joints, mix in the leaded solder thoroughly after the lead free solder has been completely melted (do not apply the soldering iron without solder).

■ Servicing soldering iron

A soldering iron with a temperature setting capability (temperature control function) is recommended.
The melting point of lead free solder is higher than leaded solder. Use a soldering iron that maintains a high stable temperature (large heat capacity), and that allows temperature adjustment according to the part being serviced, to avoid poor servicing performance.

Recommended soldering iron:

- Soldering iron with temperature control function (temperature range: 320-450 ℃)

Recommended temperature range per part:

Part	Soldering iron temperature
Mounting (chips) on mounted PCB	320 ±30℃
Mounting (chips) on empty PCB	380 ±30℃
Chassis, metallic shield, etc.	420 ±30℃

The PWB assembly which has used lead free solder

① SIGNAL board
② VIDEO board
③ JOINT board
④ AUDIO board/FILTER board/LED,RECEIVER board/TACT SW board/SPEAKER terminal board

4. Names of each part

● Outlook

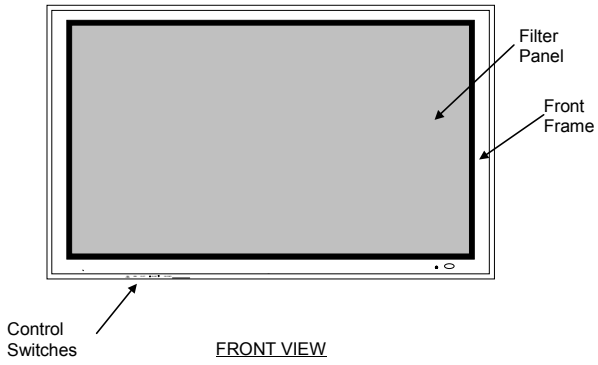

FRONT VIEW

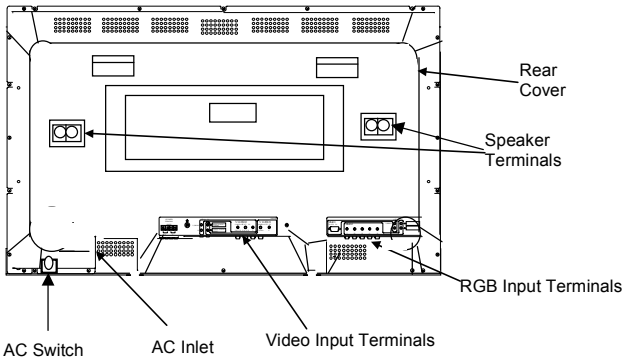

REAR VIEW

● Input terminal(D-sub connector)



PinNo	Signal
1	Red Video, (PR/CR)
2	Green Video (Sync. optional), (Y)
3	Blue Video (P_B/C_B)
4	No connection
5	No connection
6	Red Ground (P_R / C_R Ground)
7	Green Ground (Y Ground)
8	Blue Ground (P_B / C_B Ground)
9	No connection
10	Ground
11	No connection
12	[SDA]
13	H.Sync. or H/V composite
14	V.Sync. [V.CLK]
15	[SCL]

( ) :with RGB component input.

Message table

☛ Onscreen display

Indication	Condition
The monitor indicates the message "NO SYNC SIGNAL".	The monitor detects no sync signal.
The monitor indicates the message "POWER SAVE".	After a state whereby it does not sense a sync signal for 5 seconds continued.
The monitor indicates the message "OUT OF FREQUENCY".	The monitor detects a sync signal which is out of specification, or unstable.

5. Trouble shooting

5.1 Trouble Shooting of Plasma Monitor

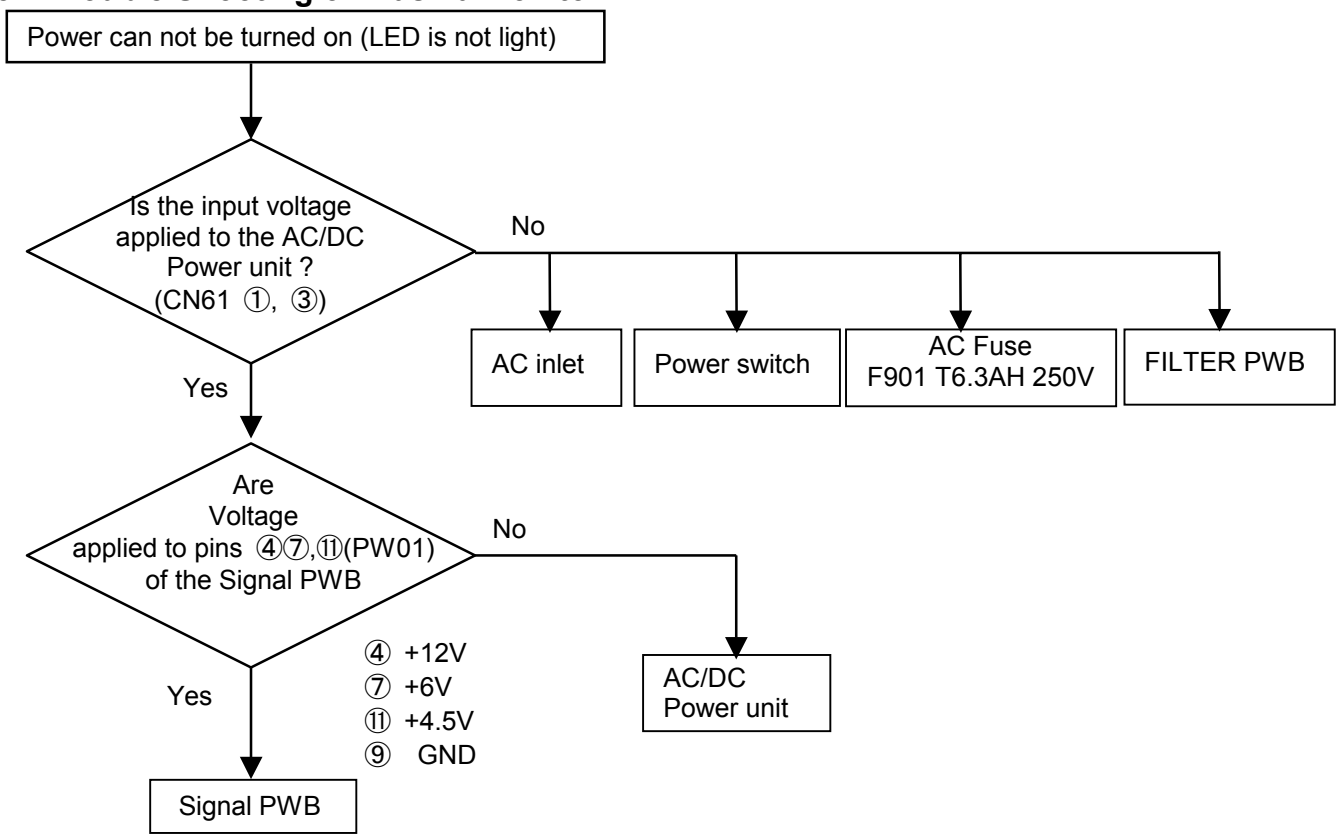

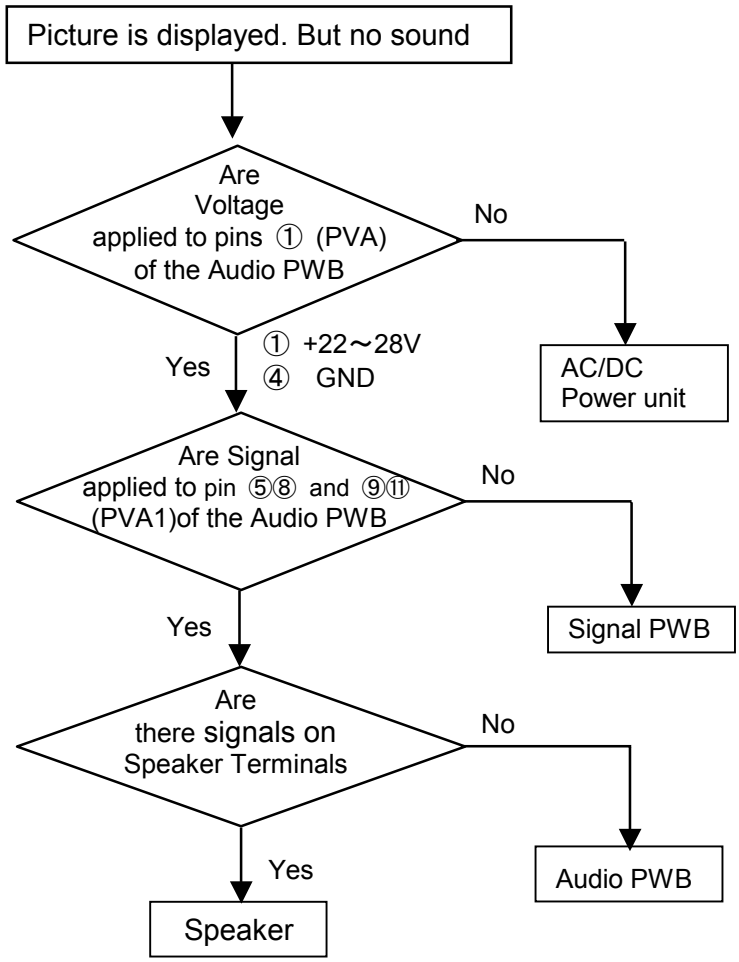

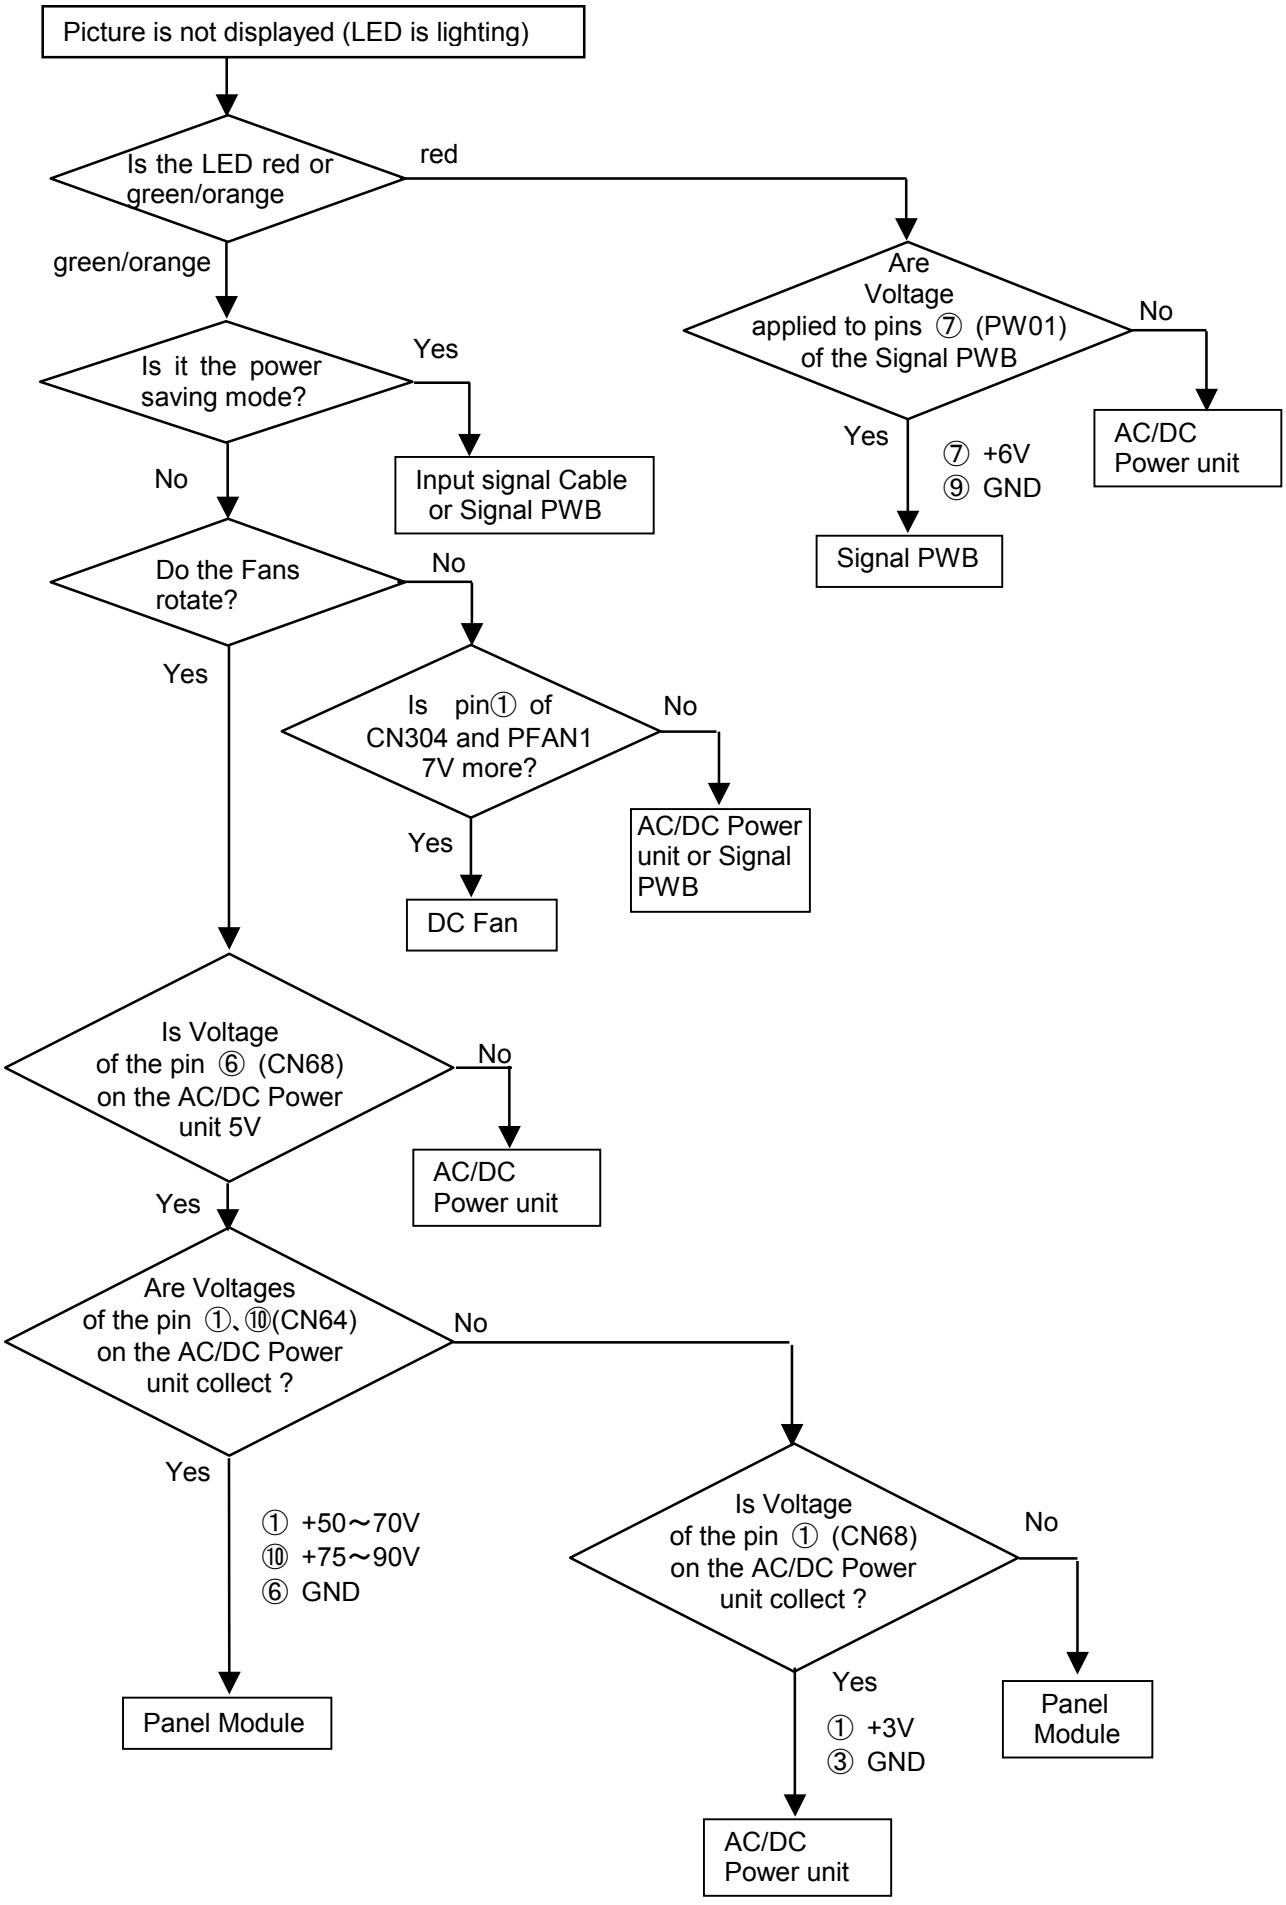
Picture is not displayed (LED is lighting)
Is the LED red or green/orange
red
green/orange
Are Voltage applied to pins ⑦ (PW01) of the Signal PWB
No
Yes
⑦ +6V
⑨ GND
AC/DC Power unit
Signal PWB
Is it the power saving mode?
Yes
No
Input signal Cable or Signal PWB
Do the Fans rotate?
No
Yes
Is pin① of CN304 and PFAN1 7V more?
No
Yes
AC/DC Power unit or Signal PWB
DC Fan
Is Voltage of the pin ⑥ (CN68) on the AC/DC Power unit 5V
No
Yes
AC/DC Power unit
Are Voltages of the pin ①、⑩(CN64) on the AC/DC Power unit collect ?
No
Yes
① +50～70V
⑩ +75～90V
⑥ GND
Panel Module
Is Voltage of the pin ① (CN68) on the AC/DC Power unit collect ?
No
Yes
① +3V
③ GND
Panel Module
AC/DC Power unit

5.2 Trouble Shooting of Panel Module from the point view of Fault Symptom

NO	Fault contents	Fault status		Suspected fault location	Analysis procedure and measure
1	Entire screen does not light.	After momentarily going on, the screen becomes black immediately or after a few seconds. (Main power is turned off.)		**X-SUS** **Y-SUS** **Panel chassis** **LOGIC** **ABUSL** **ABUSR**	
2		Screen lights dimly even on the back screen.		**LOGIC**	Replace LOGIC board
3	Vertical line	Single vertical line (of different color)	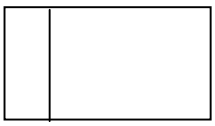	**Panel chassis** **LOGIC**	
4		Vertical line from the middle of effective scan area (Vertical line of different color)	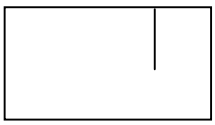	**Panel chassis**	Replace panel chassis
5	Vertical bar	Bar width of 1/7 of horizontal size or in multiples of 1/7, is displayed. Abnormal display.	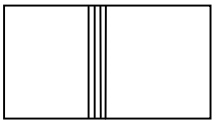	**Panel chassis** **ABUSL** **ABUSR** **LOGIC** Above boards are connected.	
6		Bar width of 3/7 or 4/7 of the screen width, is displayed. Abnormal display. (Vertical line of different color)		**ABUSL** **ABUSR** **LOGIC** Above boards are connected.	
7	Horizontal line	Single horizontal line (No light) Or single horizontal line does not light among the effective scanning area. Single horizontal line does not light.	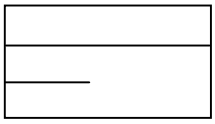	**Panel chassis**	Replace panel chassis
8	Horizontal bar	Bar width of 1/8 or multiples of 1/8 of the screen height, is displayed. Abnormal (Screen does not light)	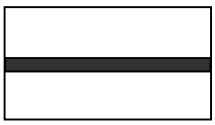	**Panel chassis**	Replace panel chassis
9		Bar width of 1/2 of the screen height. Abnormal display (Screen does not light)		**Panel chassis** **Y-SUS** **X-SUS** Above boards are connected.	

NO	Fault contents	Fault status		Suspected fault location	Analysis procedure and measure
10	Image sticking	Fixed display contents are always displayed.	ABCDE	**Panel chassis**	Perform all white heat run. After judgment, replace panel chassis
11	Stains	Oval-shaped points having abnormal luminance are scattered in the upper or lower part of screen.		**Panel chassis**	Perform all white heat run. After judgment, replace panel chassis

5.3 Trouble Shooting of Panel Module by using a Personal Computer

5.3.1 Setting up computer

Install the **panelinf.exe file** provided by DMD to the hard-disk of your PC.

5.3.2 Connecting a computer

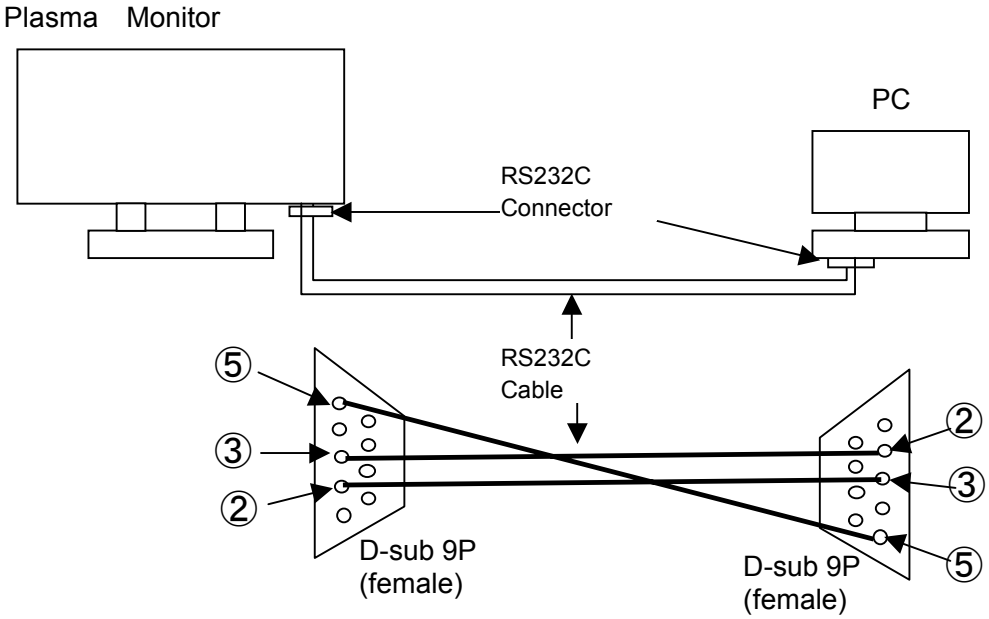

(1) Connect the RS-232C terminal of the computer to the RS-232C terminal of the plasma monitor, using RS232C cable as above.

(2) Turn on the main power of the computer.

(3) Turn on the main power of the plasma monitor.

(4) For computer running WINDOWS:

Select **panelinf.exe** from Explorer or My Computer → **<Enter>** or **<Double Crick>**.

For computer running DOS/V:

C : ¥ >panelinf → **<Enter>**

(5) The following screen appears.

```
                PANEL DATA READ
    01 :  COND                    [Hex]   xx
**  02 :  ERRC(CURRENT)           [Hex]   xx
    03 :  ERRC(BEFORE1)           [Hex]   xx
    04 :  ERRC(BEFORE2)           [Hex]   xx
    05 :  ERRC(BEFORE3)           [Hex]   xx
    06 :  ERRC(BEFORE4)           [Hex]   xx
    07 :  ERRC(BEFORE5)           [Hex]   xx
    08 :  ERRC(BEFORE6)           [Hex]   xx
    09 :  ERRC(BEFORE7)           [Hex]   xx
    10 :  ERRC(BEFORE8)           [Hex]   xx
    11 :  ERRC(BEFORE9)           [Hex]   xx
    12 :  ERRC(BEFORE10)          [Hex]   xx
    13 :  ERRC(BEFORE11)          [Hex]   xx
    14 :  ERRC(BEFORE12)          [Hex]   xx
    15 :  ERRC(BEFORE13)          [Hex]   xx
    16 :  ERRC(BEFORE14)          [Hex]   xx
    17 :  ERRC(BEFORE15)          [Hex]   xx
    18 :  OPERATION HOURS         [Dec]   xx
    EXIT
```

*1 : Use COM1: the computer's communication port.

*2 : Set the communication setup as follows.

Speed : 9600 bps
Data : 7 bits
Parity : none
Stop bit : 1 bit

*3 : If the program starts up while the monitor power is not yet on, the menu screen will not be displayed. At that time, turn on the monitor power, then the program start up again.

5.3.3 Problem Analysis Procedure

(1) Check the error code (ERRC xx : hexadecimal number) from the CURRENT, (and BEFORE**) error code read-out menu and detect the faulty position from the following table.
ERRC 00 is not valid.

(2) Using the ↑ key or ↓ key, move the ** mark to EXIT and press <ENTER> key then the screen returns to the WINDOWS or DOS screen.

Error code table (H1 panel)

ERR Code	Detect position (board)	Contents	Suspected faulty board (In the order of higher probability of defect)							Remarks
			(1)	(2)	(3)	(4)	(5)	(6)	(7)	
04	LOGIC	3.3V power voltage has dropped	LOGIC	PSU						
06		3.3V power startup is faulty	X-SUS	Y-SUS	ADM1 - 8	PSU	ABUS-L	ABUS-R	LOGIC	
18		Internal I2C_SCL1_LOW level	LOGIC							
19		Internal I2C_ACK does not respond	LOGIC							
1C		EEPROM initial setting is defective	LOGIC							
1D		EEPROM write-down is defective	LOGIC							
1E		EEPROM user initial setting is defective	LOGIC							
1F		EEPROM factory setting reading is defective	LOGIC							
24	X-SUS	Vex power voltage has decreased	X-SUS	LOGIC						
25		Vex power voltage is excessive	X-SUS							
26		Vex power startup is faulty.	X-SUS	LOGIC						
28		Vx power voltage has dropped	X-SUS	LOGIC						
29		Vx power voltage is excessive	X-SUS							
2A		Vx power startup is faulty.	X-SUS	LOGIC						
2C		Vpx voltage has dropped	X-SUS	LOGIC						
2D		Vpx voltage is excessive	X-SUS	LOGIC						
30		Vpx1 voltage has dropped	X-SUS	LOGIC						
31		Vpx1 voltage is excessive	X-SUS	LOGIC						
34		Vpx2 voltage has dropped	X-SUS	LOGIC						
35		Vpx2 voltage is excessive	X-SUS	LOGIC						
39		Vs power current is excessive (during operation)	X-SUS	Panel	LOGIC					
3B		Vs power current is excessive (during startup)	X-SUS	Panel	LOGIC					
44	Y-SUS	Vey power voltage has dropped	Y-SUS	LOGIC						
45		Vey power voltage is excessive	Y-SUS							
46		Vey power startup is faulty.	Y-SUS	LOGIC						
4C		Vpy voltage has dropped	Y-SUS	LOGIC						
4D		Vpy voltage is excessive	Y-SUS	LOGIC						
50		Vpy1 voltage has dropped	Y-SUS	LOGIC						
51		Vpy1 voltage is excessive	Y-SUS	LOGIC						
54		Vpy2 voltage has dropped	Y-SUS	LOGIC						
55		Vpy2 voltage is excessive	Y-SUS	LOGIC						
59		Vs power current is excessive (during operation)	Y-SUS	Panel	LOGIC					
5B		Vs power current is excessive (during startup)	Y-SUS	Panel	LOGIC					
5D		Vs power current is excessive (during operation)	Y-SUS	SDM	Panel	LOGIC				
61	PSU	Vs power voltage is excessive	PSU	LOGIC						
62		Vs power startup is faulty.	X-SUS	Y-SUS	PSU	LOGIC				
64	X-SUS Y-SUS	Vex and Vpy power voltage has dropped	LOGIC	X-SUS	Y-SUS					
65		Vex and Vey power voltage is excessive	X-SUS	Y-SUS						
66		Vex and Vey power startup is faulty.	LOGIC	X-SUS	Y-SUS					
68	X-SUS	Vw power voltage has dropped	Y-SUS	X-SUS	LOGIC					
69		Vw power voltage is excessive	X-SUS							
6A		Vw power startup is faulty.	Y-SUS	X-SUS	LOGIC					
6C	X-SUS Y-SUS	Vpx and Vpy voltage has dropped	LOGIC	X-SUS	Y-SUS					
6D		Vpx and Vpy voltage is excessive	LOGIC	X-SUS	Y-SUS					

ERR Code	Detect position (board)	Contents	Suspected faulty board (In the order of higher probability of defect)							Remarks
			(1)	(2)	(3)	(4)	(5)	(6)	(7)	
81	PSU	Va power voltage is excessive	PSU	LOGIC						
82		Va power startup is faulty.	ADM1 - 8	PSU	LOGIC	ABUS-L	ABUS-R			
99		Va power current is excessive (during operation)	ADM1 - 8	ABUS-L	ABUS-R	PSU	LOGIC			
9B		Va power current is excessive (during startup)	ADM1 - 8	ABUS-L	ABUS-R	PSU	LOGIC			
9D		Va power current is excessive (during operation)	ADM1 - 8	ABUS-L	ABUS-R	PSU	LOGIC			Excess current is detected In ACCC operation.
A5	ADM1	ADM1 has abnormal heat generation.	ADM1	PSU	LOGIC					It can possibly occur depending on screen display.
A9	ADM2	ADM2 has abnormal heat generation.	ADM2	PSU	LOGIC					
AD	ADM3	ADM3 has abnormal heat generation.	ADM3	PSU	LOGIC					
B1	ADM4	ADM4 has abnormal heat generation.	ADM4	PSU	LOGIC					
B5	ADM5	ADM5 has abnormal heat generation.	ADM5	PSU	LOGIC					
B9	ADM6	ADM6 has abnormal heat generation.	ADM6	PSU	LOGIC					
BD	ADM7	ADM7 has abnormal heat generation.	ADM7	PSU	LOGIC					
C5	ADM8	ADM8 has abnormal heat generation.	ADM8	PSU	LOGIC					
E2	LOGIC	5V power startup is faulty.	X-SUS	Y-SUS	PANEL	PSU	ABUS-L	ABUS-R	LOGIC	

Error code table (H2 panel)

ERR Code	Estimate Detect position (board)	Detection position	The states in error generation	Contents	Remarks
02	LOGIC	Wavy pattern ROM	In startup	Wavy pattern ROM data errors	
04		3.3V	The ordinary time	3.3V power voltage has dropped	
06			In startup	Without starting with 3.3 V voltage.	
18		Internal I2C	-	Internal I2C_SCL1_LOW level (SCL1 error)	
19				Internal I2C_ACK does not respond (SDA1 error)	
1C		EEPROM	Initialization non-execution	EEPROM initial setting is defective	
1D			Verify error	EEPROM write-down is defective	
1E			User sum error	EEPROM user initial setting is defective	
1F			Factory sum error	EEPROM factory setting reading is defective	
24	X-SUS	Vex	The ordinary time	Vex power voltage has dropped	
25				Vex power voltage is excessive	
26			In startup	Vex power startup is faulty.	
28		Vx	The ordinary time	Vx power voltage has dropped	
29				Vx power voltage is excessive	
2A			In startup	Vx power startup is faulty.	
2C		Vpx	The ordinary time	Vpx 1,2 power voltage has dropped	
2D				Vpx 1,2 power voltage is excessive	
30		Vpx1	The ordinary time	Vpx1 power voltage has dropped	
31				Vpx1 power voltage is excessive	
34		Vpx2	The ordinary time	Vpx2 power voltage has dropped	
35				Vpx2 power voltage is excessive	
39		Isx	The ordinary time	Isx power current is excessive	
3B			In startup	Isx power current is excessive (in startup)	
44	Y-SUS	Vey	The ordinary time	Vey power voltage has dropped	
45				Vey power voltage is excessive	
46			In startup	Vey power startup is faulty.	
4C		Vpy	The ordinary time	Vpy1,2 power voltage has dropped	
4D				Vpy1,2 power voltage is excessive	
50		Vpy1	The ordinary time	Vpy1 power voltage has dropped	
51				Vpy1 power voltage is excessive	
54		Vpy2	The ordinary time	Vpy2 power voltage has dropped	
55				Vpy2 power voltage is excessive	
59		Isy	The ordinary time	Isy power current is excessive	
5B			In start	Isy power current is excessive (in startup)	
5D		Isp	The ordinary time	SDM power current is excessive	
61	X-SUS Y-SUS	Vs	The ordinary time	Vs power voltage is excessive	
62			In startup	Vs power startup is faulty.	
64		Ve	The ordinary time	Ve power voltage has dropped	
65				Ve power voltage is excessive	
66			In start	Ve power startup is faulty.	
68		Vw	The ordinary time	Vw power voltage has dropped	
69				Vw power voltage is excessive	
6A			In startup	Vw power startup is faulty.	
6C		Vp	The ordinary time	Vp power voltage has dropped	
6D				Vp power voltage is excessive	
81				Va power voltage is excessive	
82			In startup	Va power startup is faulty.	
99		Ia	The ordinary time	Ia power current is excessive	
9B			In startup	Ia power current is excessive (during startup)	
9D		ACCC	The ordinary time	IaACCC power current is excessive	
A5	ADM	ADM1	The ordinary time	ADM1 has abnormal heat generation.(shutdowns)	
A9		ADM2		ADM2 has abnormal heat generation.(shutdowns)	
AD		ADM3		ADM3 has abnormal heat generation.(shutdowns)	
B1		ADM4		ADM4 has abnormal heat generation.(shutdowns)	
B5		ADM5		ADM5 has abnormal heat generation.(shutdowns)	
B9		ADM6		ADM6 has abnormal heat generation.(shutdowns)	
BD		ADM7		ADM7 has abnormal heat generation.(shutdowns)	
C5	ADM	ADM8	The ordinary time	ADM8 has abnormal heat generation.(shutdowns)	
E2			In startup	Vcc power startup is faulty.	

5.4 Checking serial ID number of Panel Module (14 digits)

The serial ID number of the panel module that is brought in for service and that of the completed panel chassis has the structure as shown below.

The serial ID number is shown on the bar code label that is attached to the rear of the chassis (aluminum).

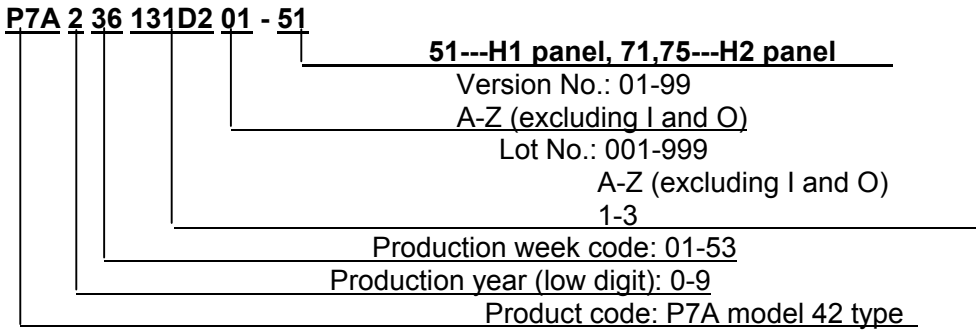
P7A 2 36 131D2 01 - 51
51---H1 panel, 71,75---H2 panel
Version No.: 01-99
A-Z (excluding I and O)
Lot No.: 001-999
A-Z (excluding I and O)
1-3
Production week code: 01-53
Production year (low digit): 0-9
Product code: P7A model 42 type

Model / Panel Module	CMP4121HDU-512/512S/512SH/512SA	CMP 4121HDE-302/303S	CMP 4201U/J	42PMA 400E/A/B	CMP 4202U/E	CMP 4203W
H1 panel Module	○	○				○
H2 panel Module			○	○	○	

6. BLOCK DIAGRAM (CMP4121HDE/CMP4202E/42PMA400E)

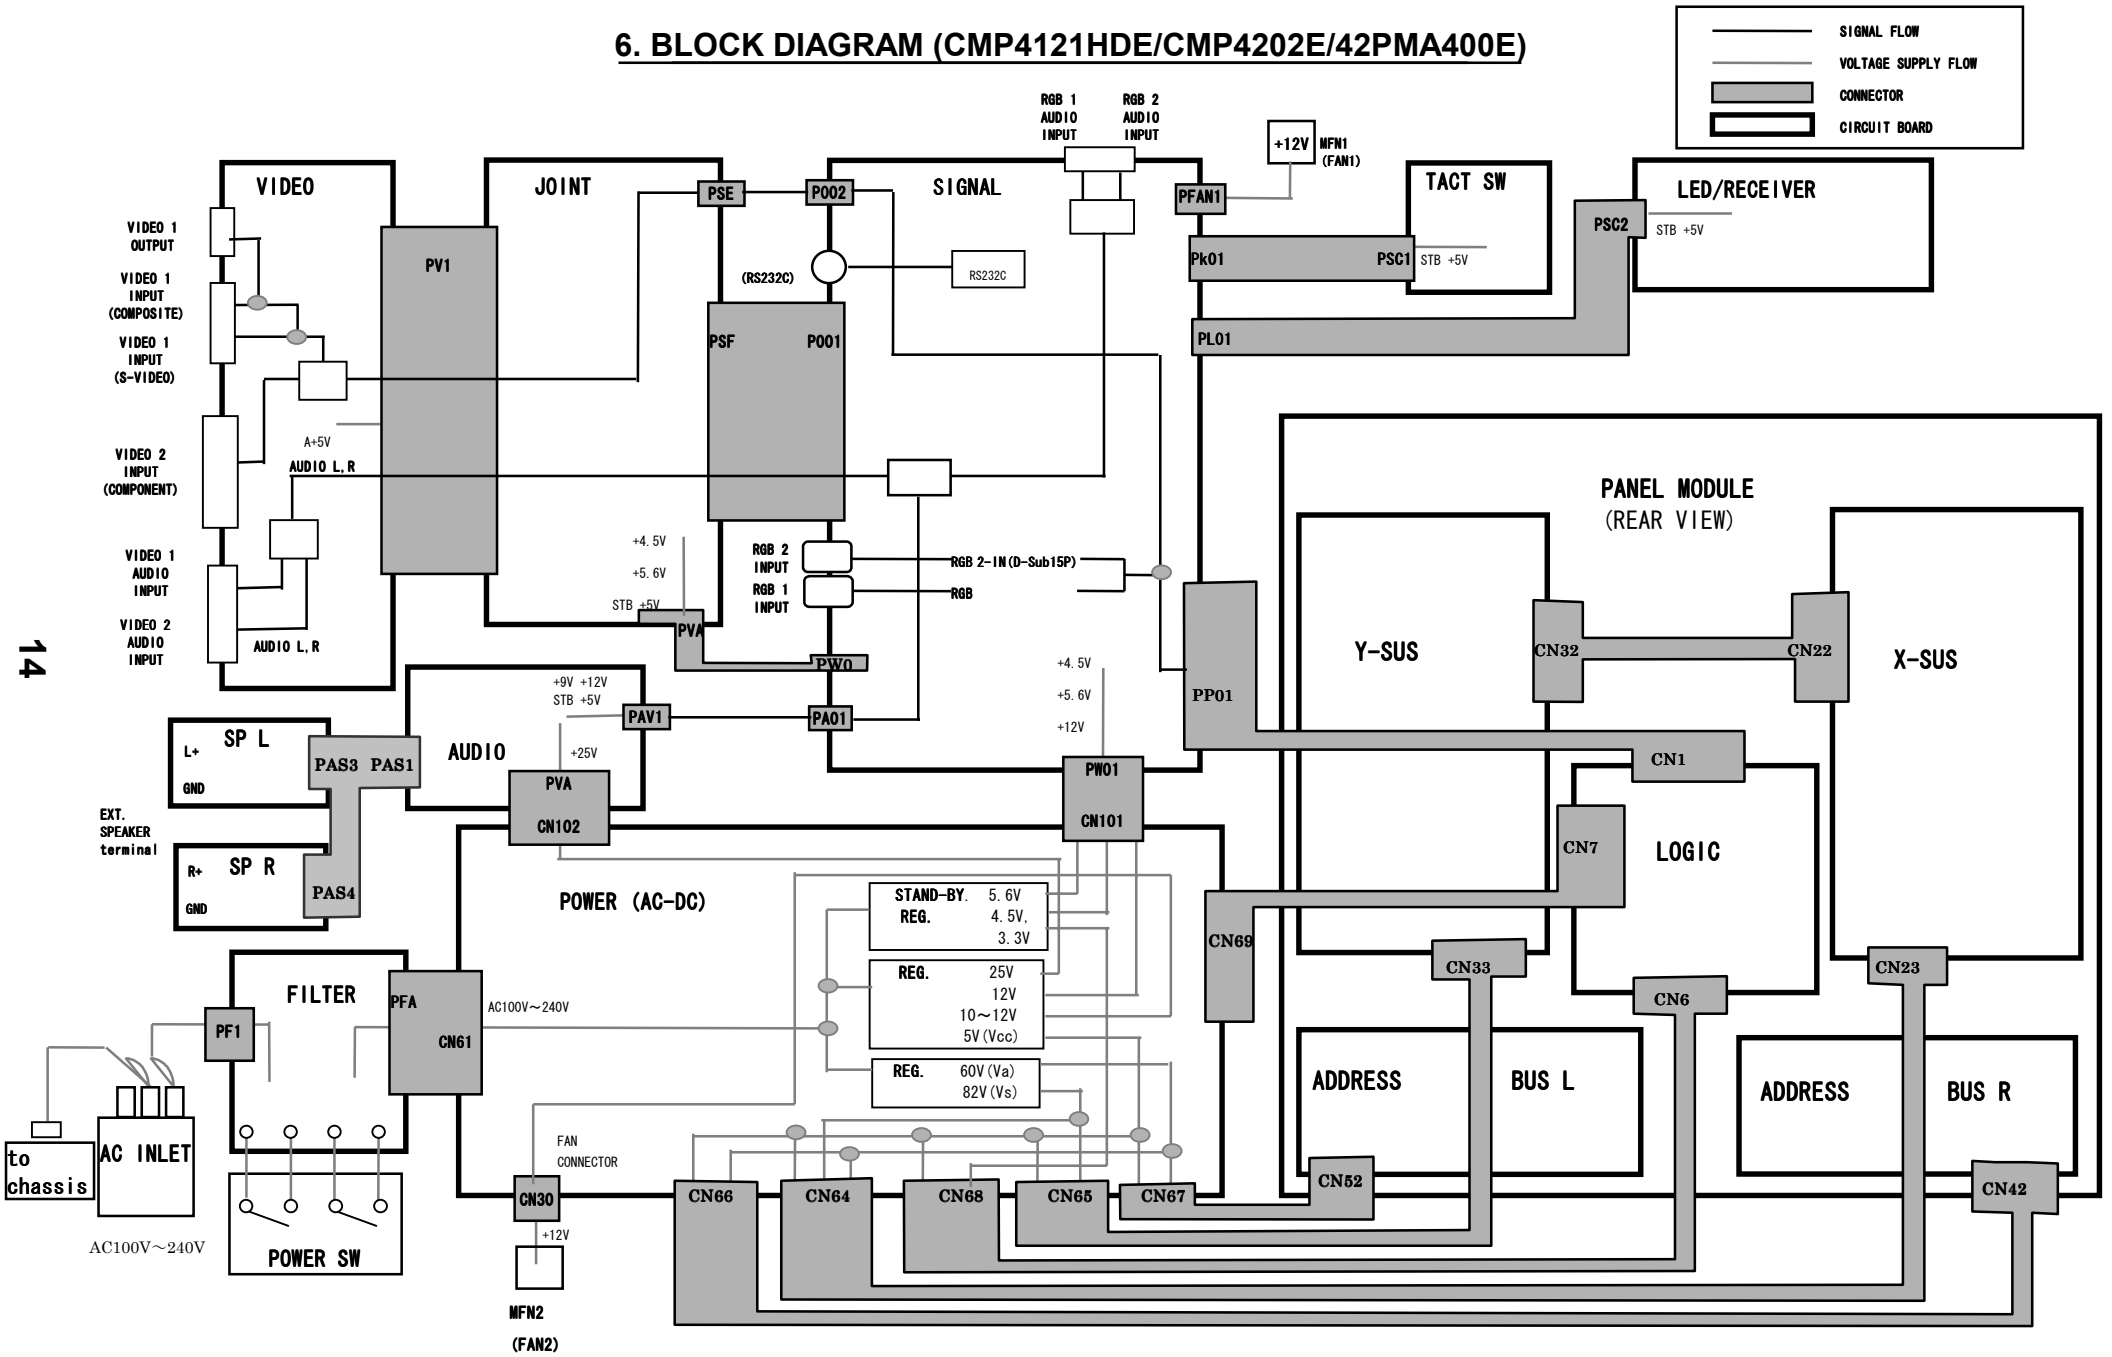

7. Disassembly diagram

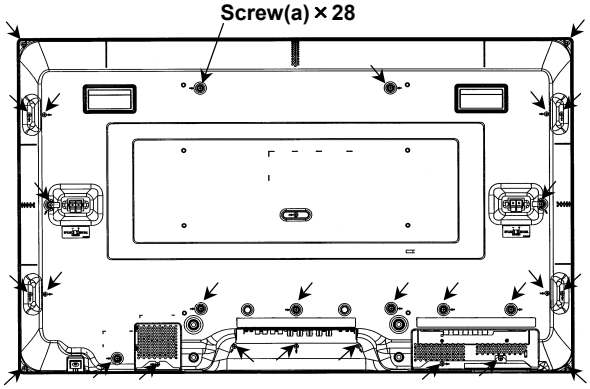

(1) Remove Back Cover

Lay down the Plasma display so that the face is down on the soft thick (over 50mm) cushion.

Be careful not to be damaged the face of Front Filter.

Remove 28screws(a) then remove Back Cover.

At this time be careful not to be damaged edges of Back Cover and its coated face.

(2) Remove Filter PWB

Remove 2screws(b) and remove "Insulation Cover".

Remove 2screws(c) of earth wires.

Disconnect PFA(EV-6P) and PF1(EV-3P) connectors.

Remove 2screws(d) of AC Power Switch Folder and remove 4screws(e) and remove Filter P.W.B.

Remove 2 screws(f) and remove AC Power Switch.

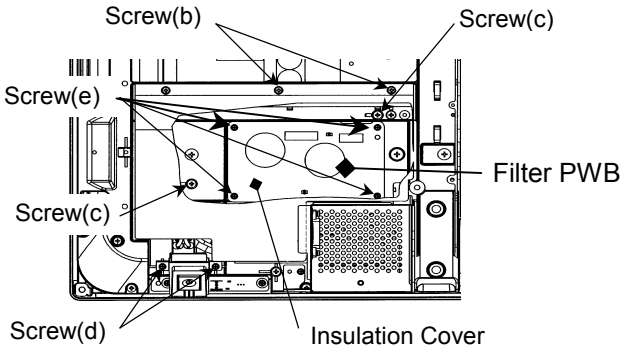

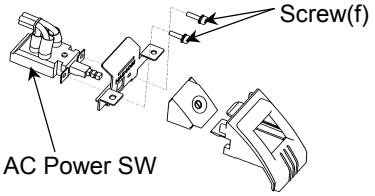

(3) Remove Signal PWB with PWB MTL,

;Signal PWB

Disconnect PP01(LVDS), PW01(EH-13P), P001(FHR-50), PA01(PH-13P), PL01(PH-6P),PK01(PH-5P),PW02(PH-7P),PFAN1(PH-3P)and P002(PH-12P) connectors.

Be careful not to be damaged the PP01 and P001 connector holders.

Remove 4screws(i) then remove Signal P.W.B with SIG PWB MTL.

(4)-1 Video Unit/JOINT PWB and Audio PWB with PWB MTL.

;JOINT PWB

Disconnect PAV(PH-7P), PSE(PH-12P), and PSF(FHR-50) connectors.

;Audio PWB

Disconnect PVA, PAS1, and PAV1 connectors.

Remove 6 screws(k) then remove VIDEO PWB MTL.

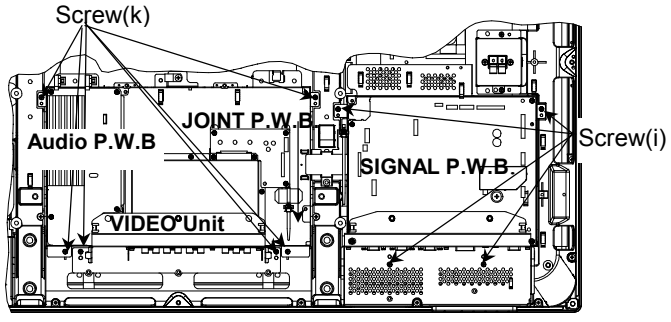

(4)-2 VIDEO Unit

Remove 2screws(j) then pull out Video Unit.

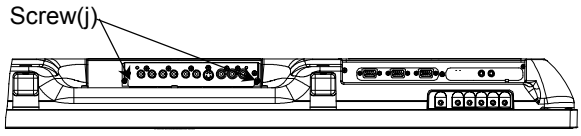

(5) Remove Front Frame

Remove 18screws(m) then remove Front Frame.

Be careful not to fall down the Front Frame when remove 18screws(m).

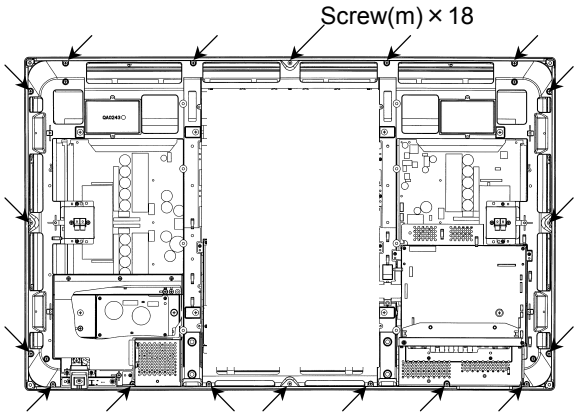

(6) Remove Front Filter (Glass)

Remove 8screws(n), and remove Filter Fix Metal then remove Front Filter.

When attach the new Front Filter to the Front Frame, locating the conducting electrode side to the inside, and attach Filter Fix Metal.

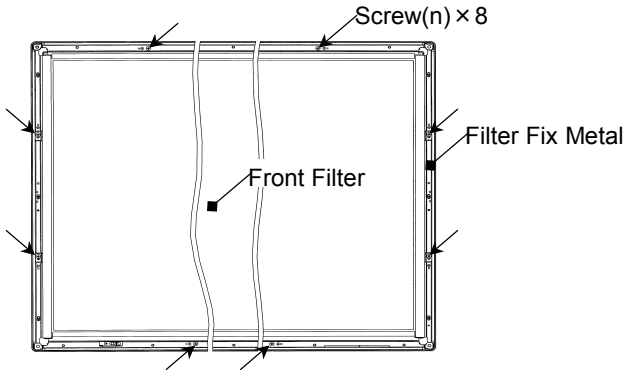

(7) Remove Fan (MFN1)

Remove 1screw(o) and disconnect PFAN1(PH-3P) connector,

then remove Fan. (only H1 panel)

(8) Remove Main Frame

Lay down the Plasma Display so that the face is down on the soft thick (over 50mm) cushion. Be careful not to be damaged the face of Display Panel.

Disconnect CN61(EV-6P) connector.

(H1 panel)
Remove 8 screws(q) and 5screws(r) then disconnect CN1(LVDS) connector which is attached Panel Module's Logic Board. Remove Main Frame.

(H2 panel)
Remove 8 screws(q) then disconnect CN1(LVDS) connector which is attached Panel Module's Logic Board. Remove Main Frame.

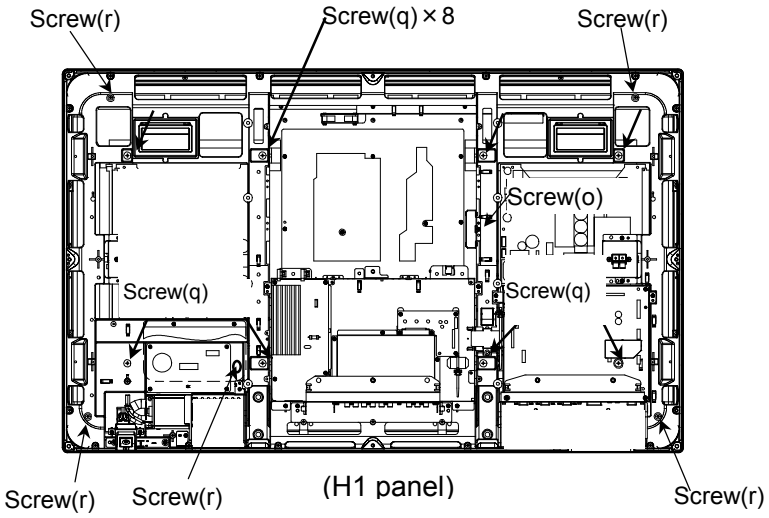

(H1 panel)

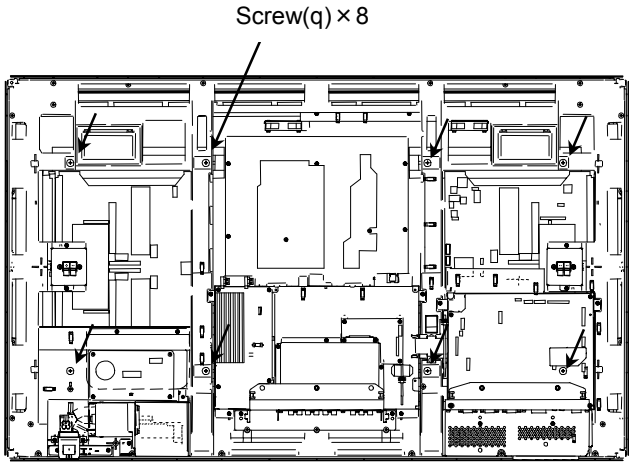

(H2 panel)

(9) Remove Power Unit P.W.B.

Disconnect CN101(EH-13P), CN102(EH-6P)CN64(VH-10P), CN65(VH-9P),CN66(PH-7P), CN67(PH-7),CN68(PH-6P) and CN69 (FLAT Cable).

Be careful not to be damaged the CN69 connector folder. Remove 10 screws(v) then remove Power Unit P.W.B.

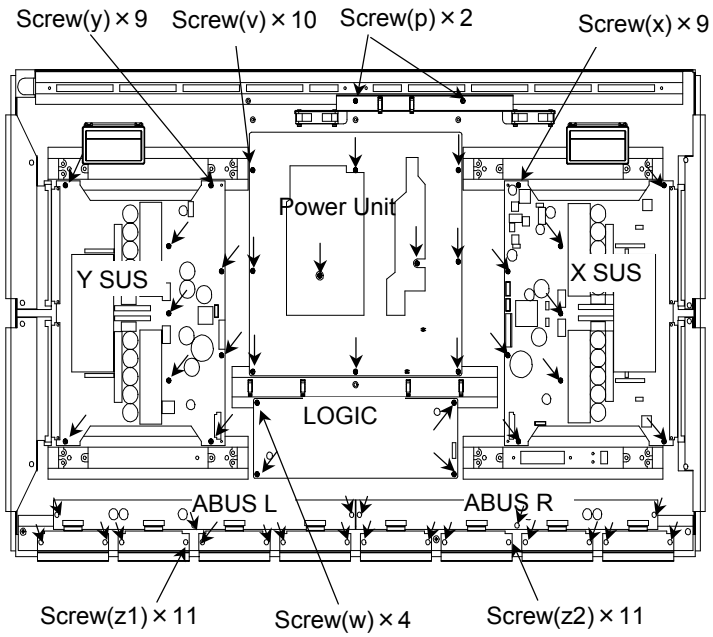

(10) Remove Fan (H1/H2 panel)

Disconnect CN304 connector.

Remove 2screws(p) then remove Fan fix metal.

(11) Remove Panel LOGIC P.W.B.

Disconnect CN1, CN2, CN3, CN4, CN5, CN6 and CN7 connectors. Be careful not to be damaged the CN2, CN3, CN4, CN5 and CN7 connector folders. Remove 4screws(w) then remove Panel LOGIC P.W.B.

(12) Remove Panel X-SUS P.W.B.

Disconnect CN21, CN22 and CN23 connectors. Be careful not to be damaged the CN21 connector folder.

Remove 9screws(x) then remove Panel X-SUS P.W.B. pulling out from CN24 and CN25 connectors.

(13) Remove Panel Y-SUS P.W.B.

Disconnect CN31, CN32 and CN33 connectors. Be careful not to be damaged the CN31 connector folder. CN34 and CN35 connector Remove 9 screws(y) then remove Panel Y-SUS P.W.B. pulling out from CN34 and CN35 connectors

(14) Remove Panel ABUS R P.W.B

Disconnect CN41, CN42, CN43, CN44, CN45 and CN46 Connectors. Be careful not to be damaged the CN41, CN43, CN44, CN45 and CN46 connectors folders.

Remove 11 screws (z2), then remove Panel ABUS R P.W.B.

(15) Remove Panel ABUS L P.W.B

Disconnect CN51, CN52, CN53, CN54, CN55 and CN56 connectors. Be careful not to be damaged the CN51, CN53, CN54, CN55 and CN56 connector folders.

Remove 11 screws (z1), then remove Panel ABUS L P.W.B.

8. Re-Adjustment

After changing the Panel Module, re-adjustment is needed according to the item 8.1.to 8.5. For Power Unit, item 8.1; for Signal Board, item 8.2 to 8.5* and for Video Board, item 8.2, 8.4,8.5 are needed.

It is recommended to start re-adjustment after 30 minutes warm-up with the Burn-in signal.

*) When it is not inserted into VIDEO Unit of optional Board in Signal Board replacement, VIDEO Unit becomes necessary. In this case, insert the dummies' VIDEO unit and execute the above adjustment item.

How to set to Burn-in signal

(red, green, blue, white, yellow, cyan, magenta, black signal)

Turn off the sub power button (or power button on the Remote Controller), then turn on the SUB POWER button for more than 5 seconds while you keep pushing VOLUME▼ and RECALL buttons located on the bottom of the set.

When you fall out from Burn-in mode, turn off the sub power button (or power button on the Remote Controller),then turn on the SUB POWER button for more than 5 seconds while you Keep pushing VOLUME▼ button located on the bottom of the set.

8.1 Vs and Va voltage adjustment on Power Unit

How to prepare

1.Connect the DC Voltmeter to the Vs test point and the GND point (or the Va test point and the GND point) on the Power Unit.

2.Connect VGA (75), no-setup, and all black signal to RGB input terminal.

3.Check the amount of Vs and Va voltages printed on the label located lower left side on the Panel Module.

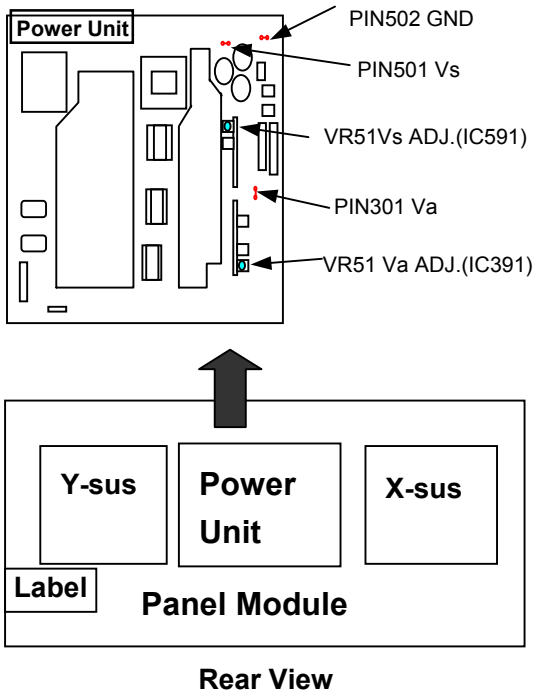

Rear View

How to adjust

1.If the difference of the printed voltage of Vs and the value of DC Voltmeter of Vs is over ±0. 4 V, adjust the Vs ADJ Volume located upward on the Power Unit to within ±0. 4 V.

2. If the difference of the printed voltage of Va and the value of DC Voltmeter of Va is over ±0. 4 V, adjust the Va ADJ Volume located upward on the Power Unit to within ±0. 4 V.

8.2 Personal Computer (PC) input and Video input Automatic amplitude adjustment

How to set to service adjustment mode

Turn off the sub power button (or power button on the Remote Controller),
Then turn on the SUB POWER button for more than 5 seconds while you keep pushing INPUT SELECT and RECALL buttons located on the bottom of the set.

Preparation

1. Indicate service adjustment mode.
2. Select SHIP.2, then press [RECALL] button more than 3 seconds by Remote Controller.
   (The screen disappears, and EEPROM is initialized.)
   A service adjustment mode screen appears after initialization end again.

*** : Select items : Press [▲, ▼] botton of Remote Controller.**
Adjust Data : Press [◀ , ▶] botton of Remote controller.
Memorize the data : Press [ENTER] botton of Remote controller.

Adjustment Signal

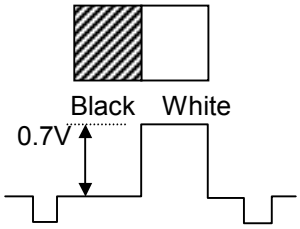

Black pattern : Set pedestal level.
This signal must not insert character.

*Fig.1 Adjustment Signal

How to adjust (VIDEO input)

1.Input 525p(480p) adjustment signal into VIDEO2 input terminal.
2.Change CONTRAST of the MENU screen from DYNAMIC to LINEAR.
3.Service adjustment mode screen again
4.Select No.259. (RGB ADJ.)
5.Press [ENTER] button more than 2 seconds. * Start the automatic adjustment.
6.Complete the adjustment after disappear ADJUSTMENT indication.
7.Change CONTRAST of the MENU screen from LINER to DYNAMIC again.

How to adjust (PC input)

1.Input VGA (60Hz) adjustment signal into RGB input terminal.
2.Indicate service adjustment mode.
3.Select No.259. (RGB ADJ.)
4.Press [ENTER] button more than 2 seconds. * Start the automatic adjustment.
5.Complete the adjustment after disappear ADJUSTMENT indication.

*Never adjust without use our specify signal.
If press [ENTER]button at No.259 by mistake, the picture becomes abnormal (Black level, Contrast and Color.)

8.3 Color temperature adjustment for PC

How to prepare

1.Set signal generator output signal to Full White.
2.Signal condition
VGA (75): 0.7Vp-p, Set up level: 0V
3.Input the signal into RGB (D-sub) terminal.
4.Set Picture setting up to reference.

How to adjust

1.Indicate service adjustment mode and adjust as follows by Remote Controller.
2.Measurement probe of CRT Color Analyzer CA-100 is set on the center of screen.
3.Adjust color temperature as follows by reducing one or two numbers of No.9, 10, 11.
(At least one of these datas should be 255.)
PC color temperature (COOL)
x=0.285±0.005, y=0.294±0.005, at 9300 K
4. Adjust color temperature as follows by reducing one or two numbers of No.12, 13, 14.
(At least one of these datas should be 255.)
PC color temperature (NORMAL)
x=0.300±0.005, y=0.298±0.005, at 7600 K
5.Adjust color temperature as follows by reducing one or two numbers of No.15, 16, 17.
(At least one of these datas should be 255.)
PC color temperature (WARM)
x=0.314±0.005, y=0.327±0.005, at 6500 K

Suggestion

1.Luminance of panel surface is less than 20 lux to arrange adjustment environment.
2.Adjstment is **reduce value adjustment only**. (Impossible to increase value adjustment.)
3.Color select mode is automatically set to COOL while adjustment No.9, 10 and 11.
4.Color select mode is automatically set to NORMAL while adjustment No.12, 13 and 14.
5.Color select mode is automatically set to WARM while adjustment No.15, 16 and 17.

8.4 Color temperature adjustment for Video

How to prepare

1.Set signal generator output signal to Full White.
2.Signal condition
480i/60Hz Component signal
Video level: 0.714Vp-p,
Sync level: 0.286Vp-p
Set up level: 0V
3.Input the signal into VIDEO2 terminal.
4.Set Picture setting up to reference.
5.Make sure that CONTRAST is LINEAR.
6.Do after color temperature adjustment of PC.

How to adjust

1.Indicate service adjustment mode and adjust as follows by Remote Controller.

2.Measurement probe of CRT Color Analyzer CA-100 is set on the center of screen.

3.Adjust color temperature as follows by reducing one or two numbers of No.0, 1, 2.

(At least one of these datas should be 255.)

VIDEO color temperature (COOL)

x=0.285±0.005, y=0.294±0.005, at 9300 K

4. Adjust color temperature as follows by reducing one or two numbers of No.3, 4, 5.

(At least one of these datas should be 255.)

VIDEO color temperature (NORMAL)

x=0.300±0.005, y=0.298±0.005, at 7600 K

5.Adjust color temperature as follows by reducing one or two numbers of No.6, 7, 8.

(At least one of these datas should be 255.)

VIDEO color temperature (WARM)

x=0.314±0.005, y=0.327±0.005, at 6500 K

Suggestion

1.Luminance of panel surface is less than 20 lux to arrange adjustment environment.

2.Adjstment is **reduce value adjustment only**. (Impossible to increase value adjustment.)

3.Color select mode is automatically set to COOL while adjustment No.0, 1 and 2.

4.Color select mode is automatically set to NORMAL while adjustment No.3, 4 and 5.

5.Color select mode is automatically set to WARM while adjustment No.6, 7 and 8.

8.5 Reset adjustment

Always set to factory Setting mode, to prevent error picture, Reset should be done.

When above adjustment is finished, turn off the SUB POWER button (or power button on the Remote Controller) and Main power Switch.

How to set to factory Setting

Receive a signal in RGB1.

Turn off the SUB POWER button (or power button on the Remote Controller),

Then turn on the sub power button for more than 5 seconds while you keep pushing SIZE and RECALL buttons located on the bottom of the set.

You fall out from factory Setting mode, turn off the SUB POWER button (or power button on the Remote Controller).

9 Wiring Drawing

9.1 Panel Module and Power Unit section

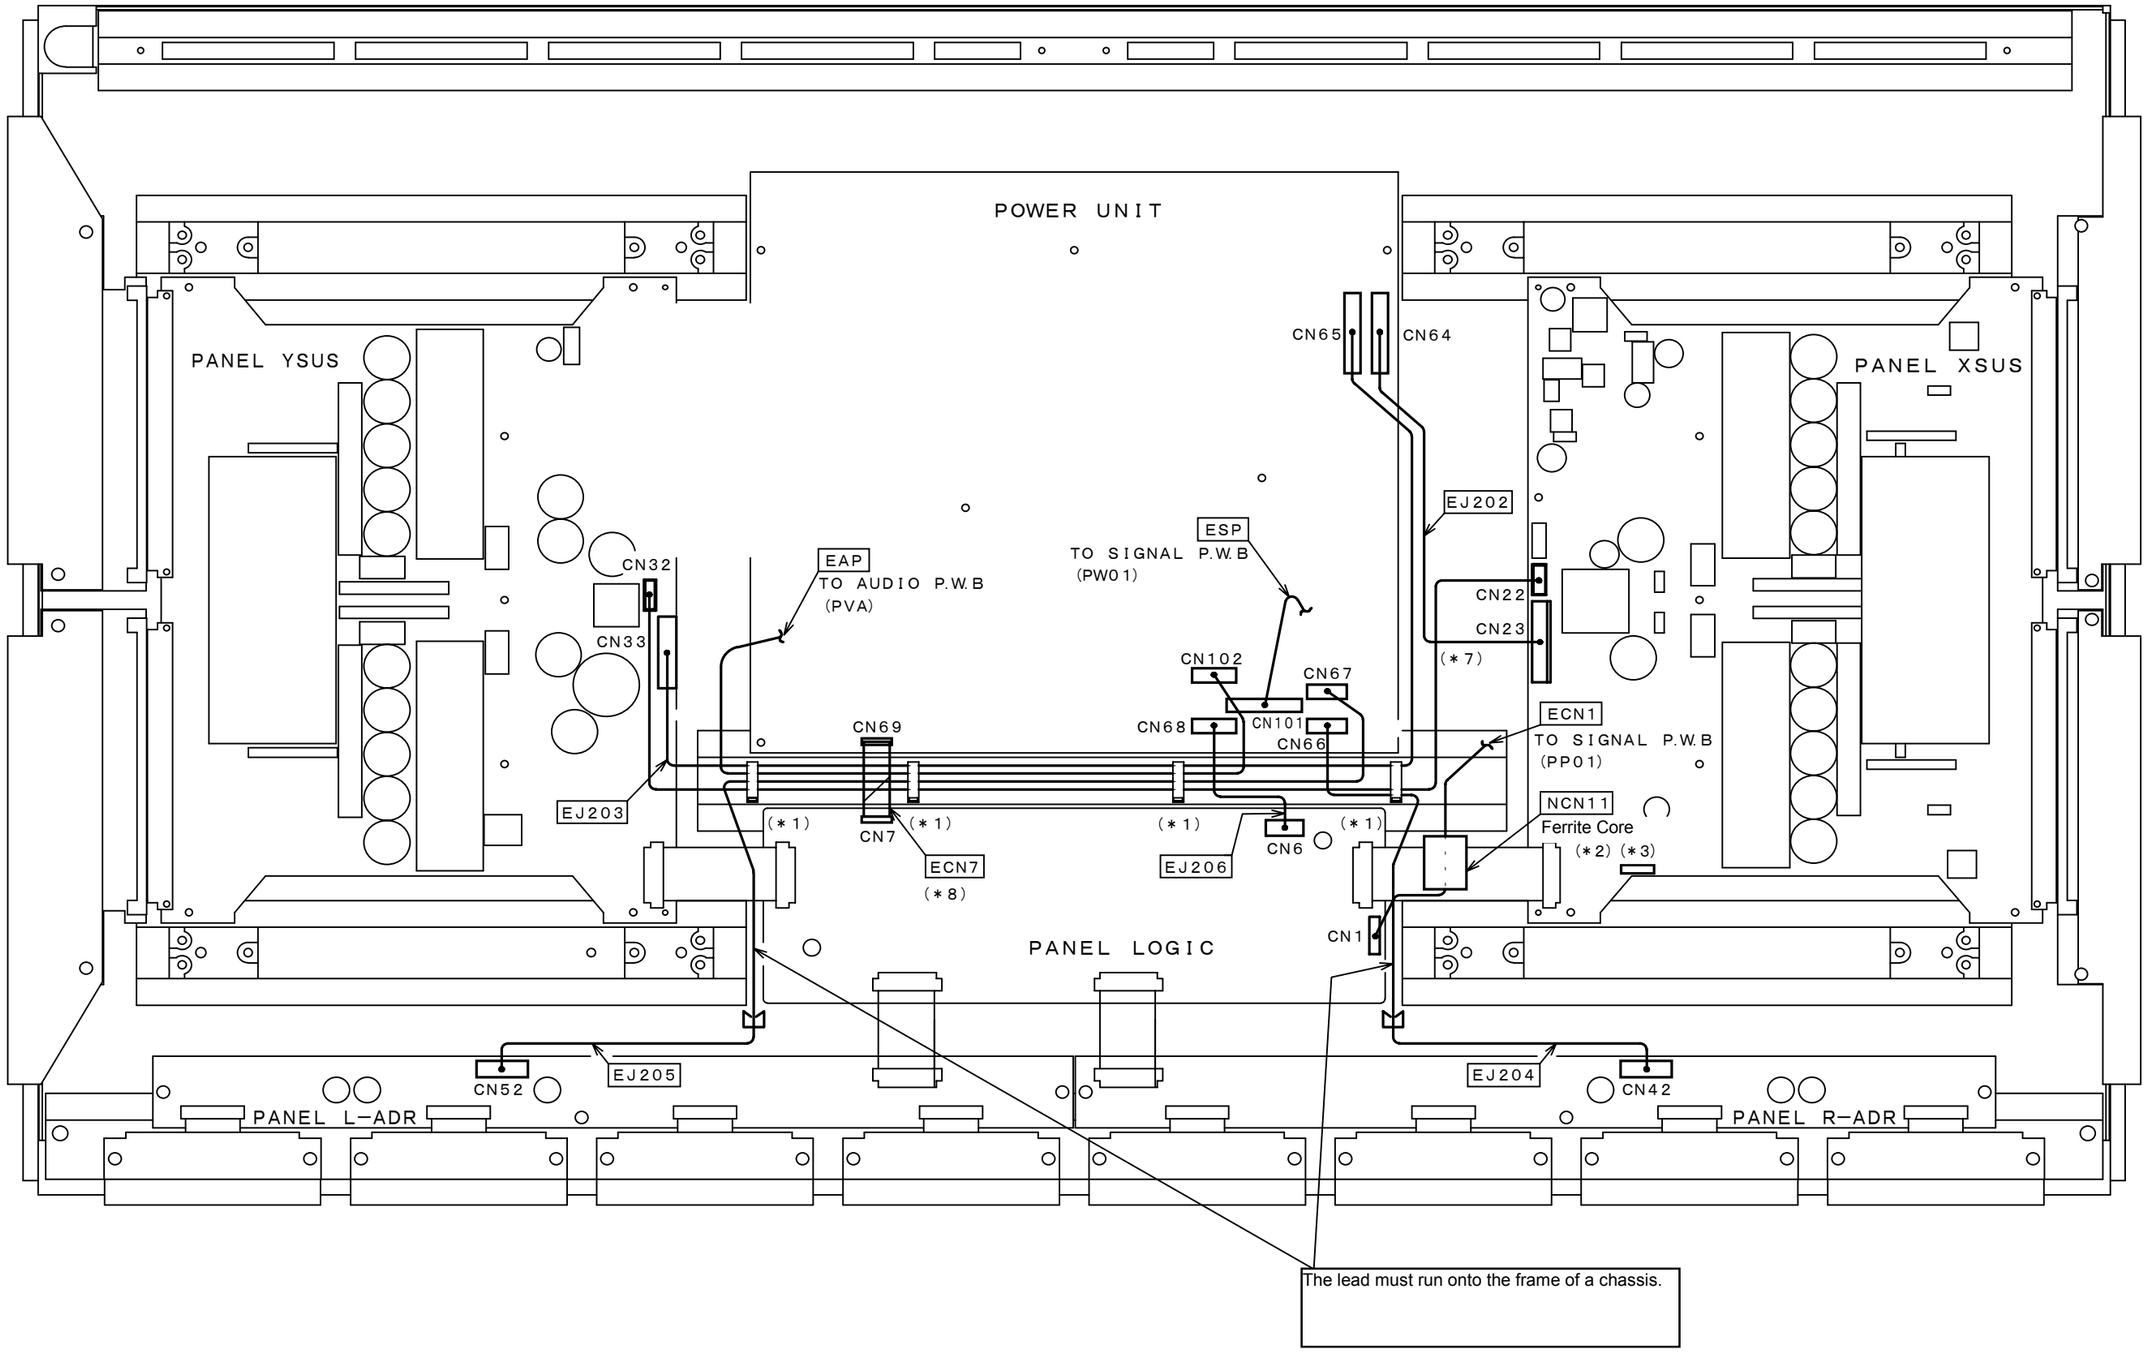

9.2 Plasma Monitor（H1/H2 panel）

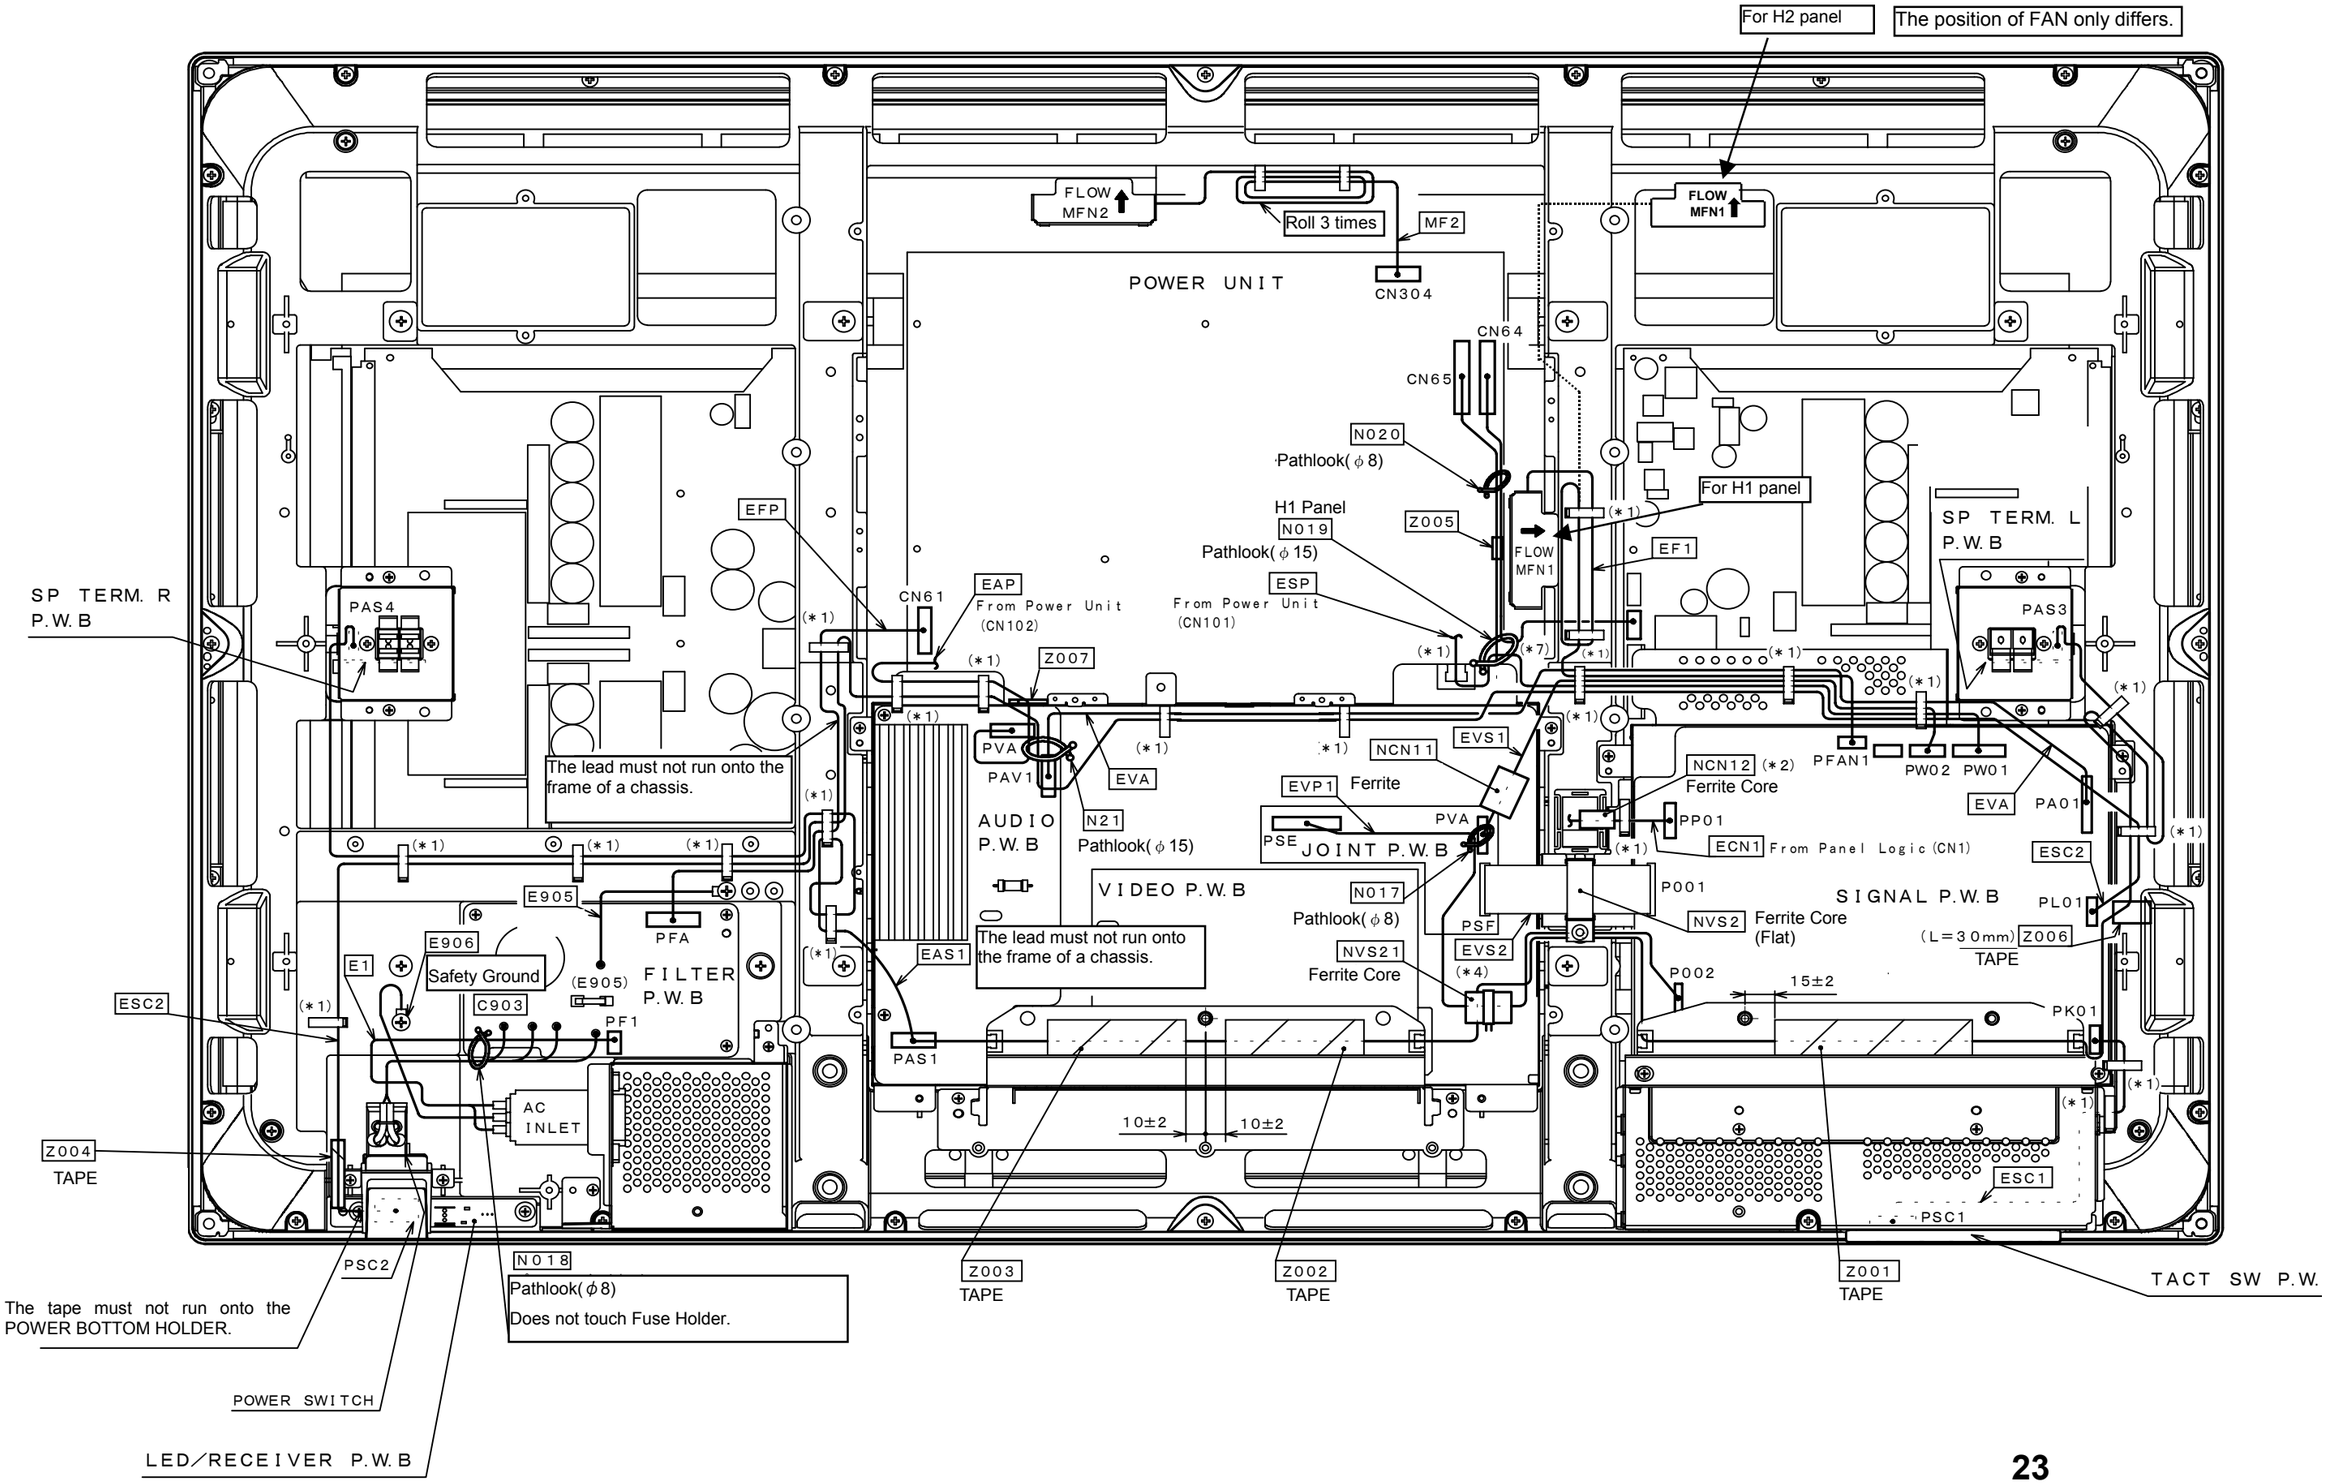

THE UPDATED PARTS LIST

FOR THIS MODEL IS

AVAILABLE ON ESTA

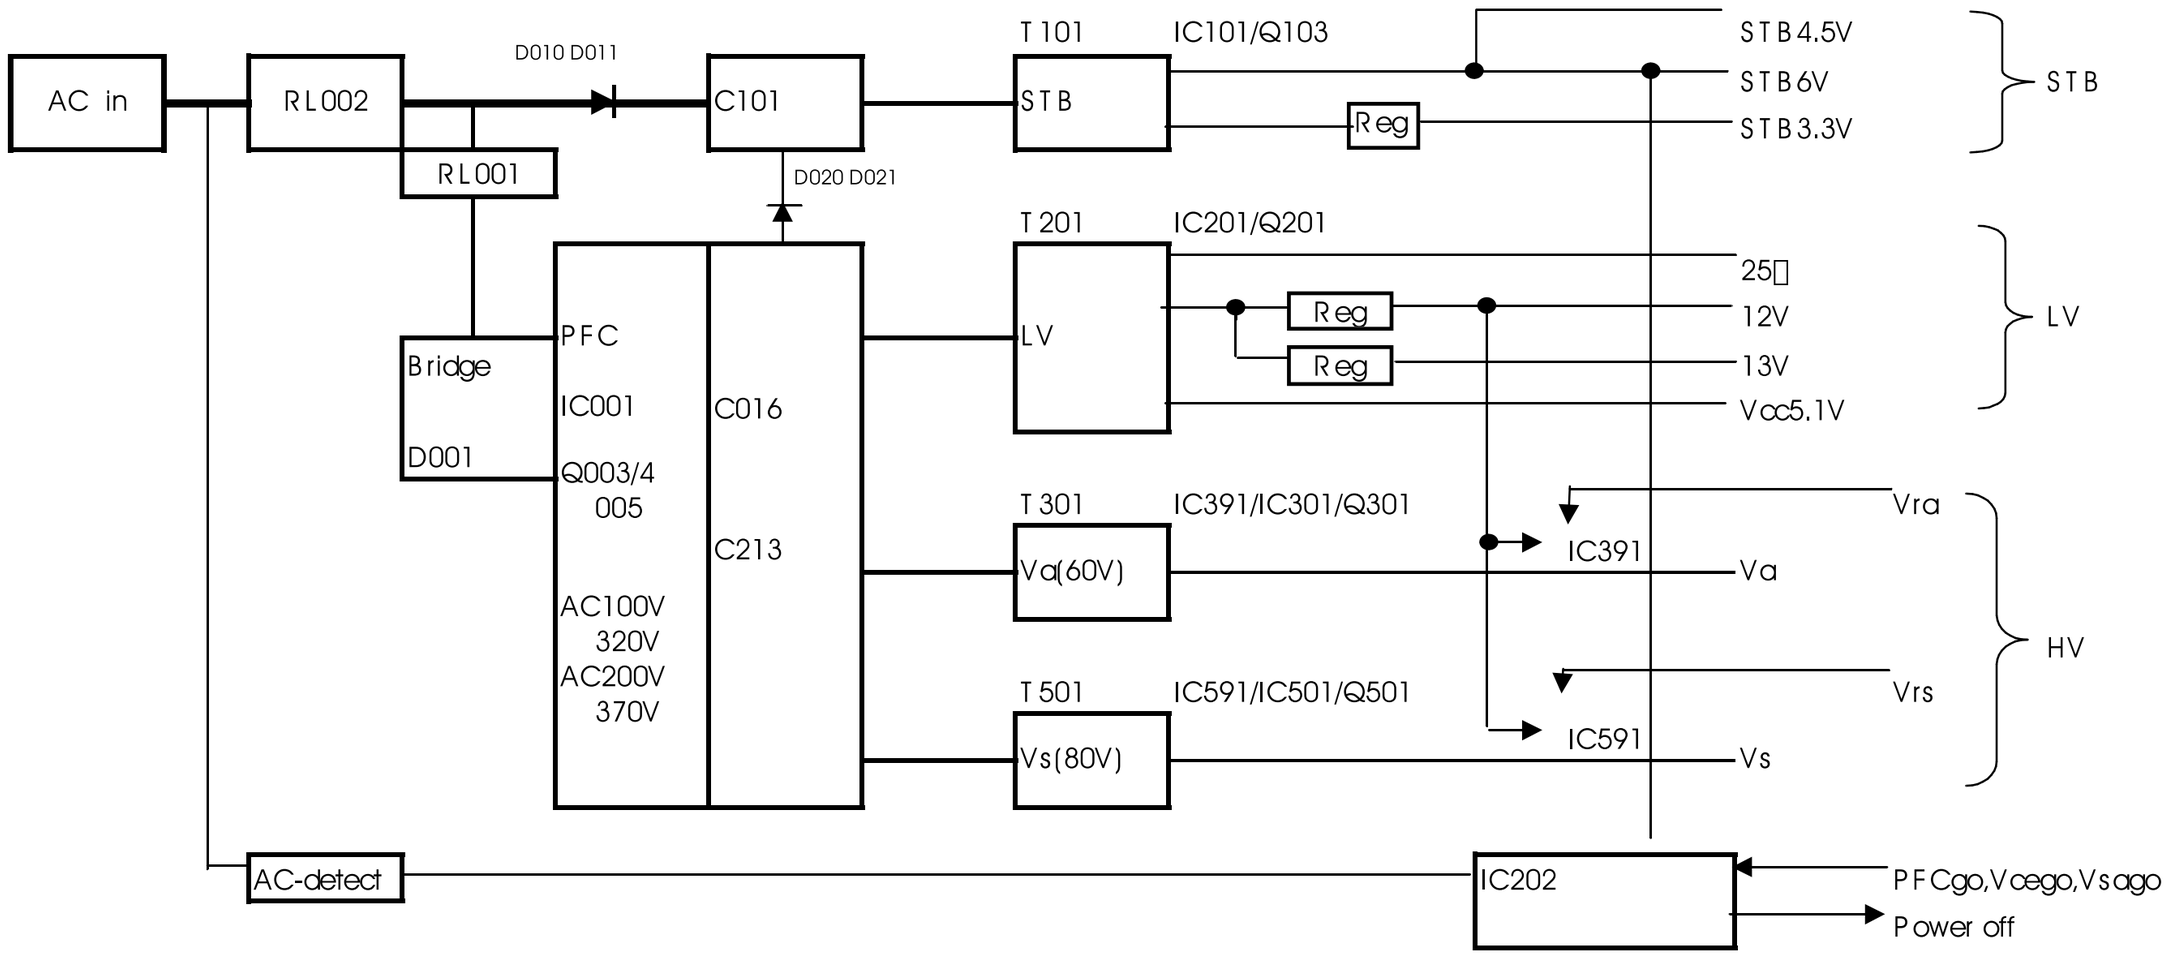

SM0064	Power Supply Block Diagram	HITACHI

1.AC input

NO.	CN61
1	AC(L)
2	NC
3	AC(N)
4	NC
5	NC
6	FG

2.signal 1

NO.	CN101
1	POWER OFF
2	NC
3	LOCK-SIG
4	12
5	GND
6	GND
7	6
8	6
9	GND
10	GND
11	4.5
12	4.5
13	NC

3.Signal 2

NO.	CN102
1	25
2	25
3	25
4	GND
5	GND
6	GND

4.FAN

NO.	CN304
1	+13V
2	GND
3	LOCK

5.Panel 1

NO.	CN64
1	Va
2	NC
3	Vcc
4	GND
5	GND
6	GND
7	NC
8	Vs
9	Vs
10	Vs

6.Panel 2

NO.	CN65
1	Vcc
2	GND
3	GND
4	GND
5	GND
6	NC
7	Vs
8	Vs
9	Vs

7.Panel 3

NO.	CN66/CN67
1	Va
2	NC
3	NC
4	GND
5	GND
6	NC
7	Vcc

8.Panel 4

NO.	CN68
1	STB3.3V
2	NC
3	GND
4	GND
5	NC
6	Vcc

9.Panel 5

NO.	CN69
1	NC
2	NC
3	NC
4	NC
5	GND
6	Vsago
7	GND
8	Vcego
9	GND
10	PFCgo
11	GND
12	Vra
13	GND
14	Vrs
15	GND
16	Vlak
17	GND
18	Vak
19	GND
20	Vsk

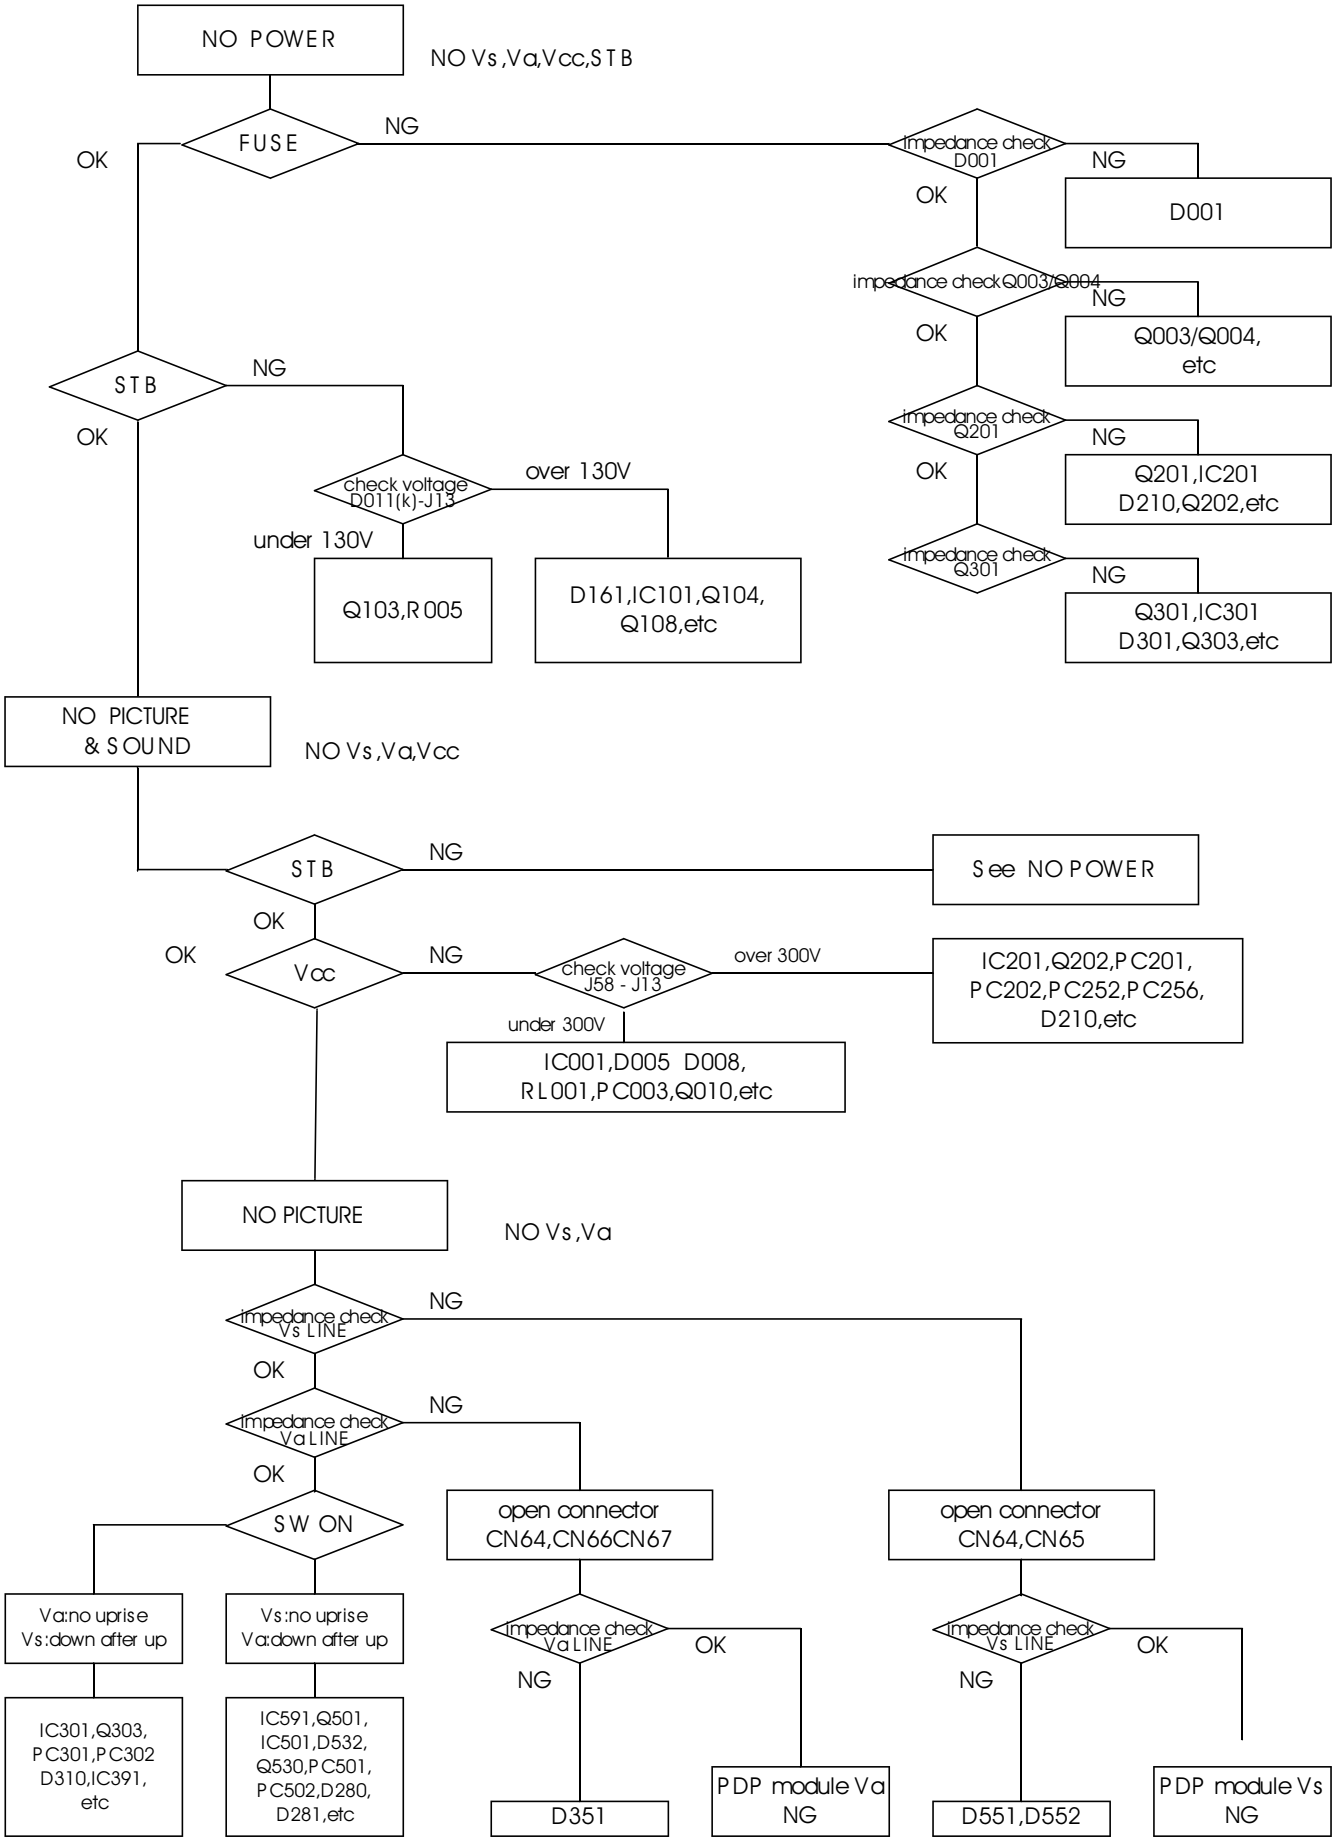
NO POWER
NO Vs,Va,Vcc,STB
FUSE
NG
OK
Impedance check D001
NG
D001
OK
impedance check Q003/Q004
NG
Q003/Q004, etc
OK
Impedance check Q201
NG
Q201,IC201 D210,Q202,etc
OK
impedance check Q301
NG
Q301,IC301 D301,Q303,etc
STB
NG
OK
check voltage D011(k)-J13
over 130V
under 130V
Q103,R005
D161,IC101,Q104, Q108,etc
NO PICTURE & SOUND
NO Vs,Va,Vcc
STB
NG
See NO POWER
OK
OK
Vcc
NG
check voltage J58 - J13
over 300V
IC201,Q202,PC201, PC202,PC252,PC256, D210,etc
under 300V
IC001,D005 D008, RL001,PC003,Q010,etc
NO PICTURE
NO Vs,Va
Impedance check Vs LINE
NG
OK
Impedance check Va LINE
NG
OK
SW ON
open connector CN64,CN66CN67
open connector CN64,CN65
Va:no uprise Vs:down after up
Vs:no uprise Va:down after up
Impedance check Va LINE
OK
NG
Impedance check Vs LINE
OK
NG
IC301,Q303, PC301,PC302 D310,IC391, etc
IC591,Q501, IC501,D532, Q530,PC501, PC502,D280, D281,etc
D351
PDP module Va NG
D551,D552
PDP module Vs NG

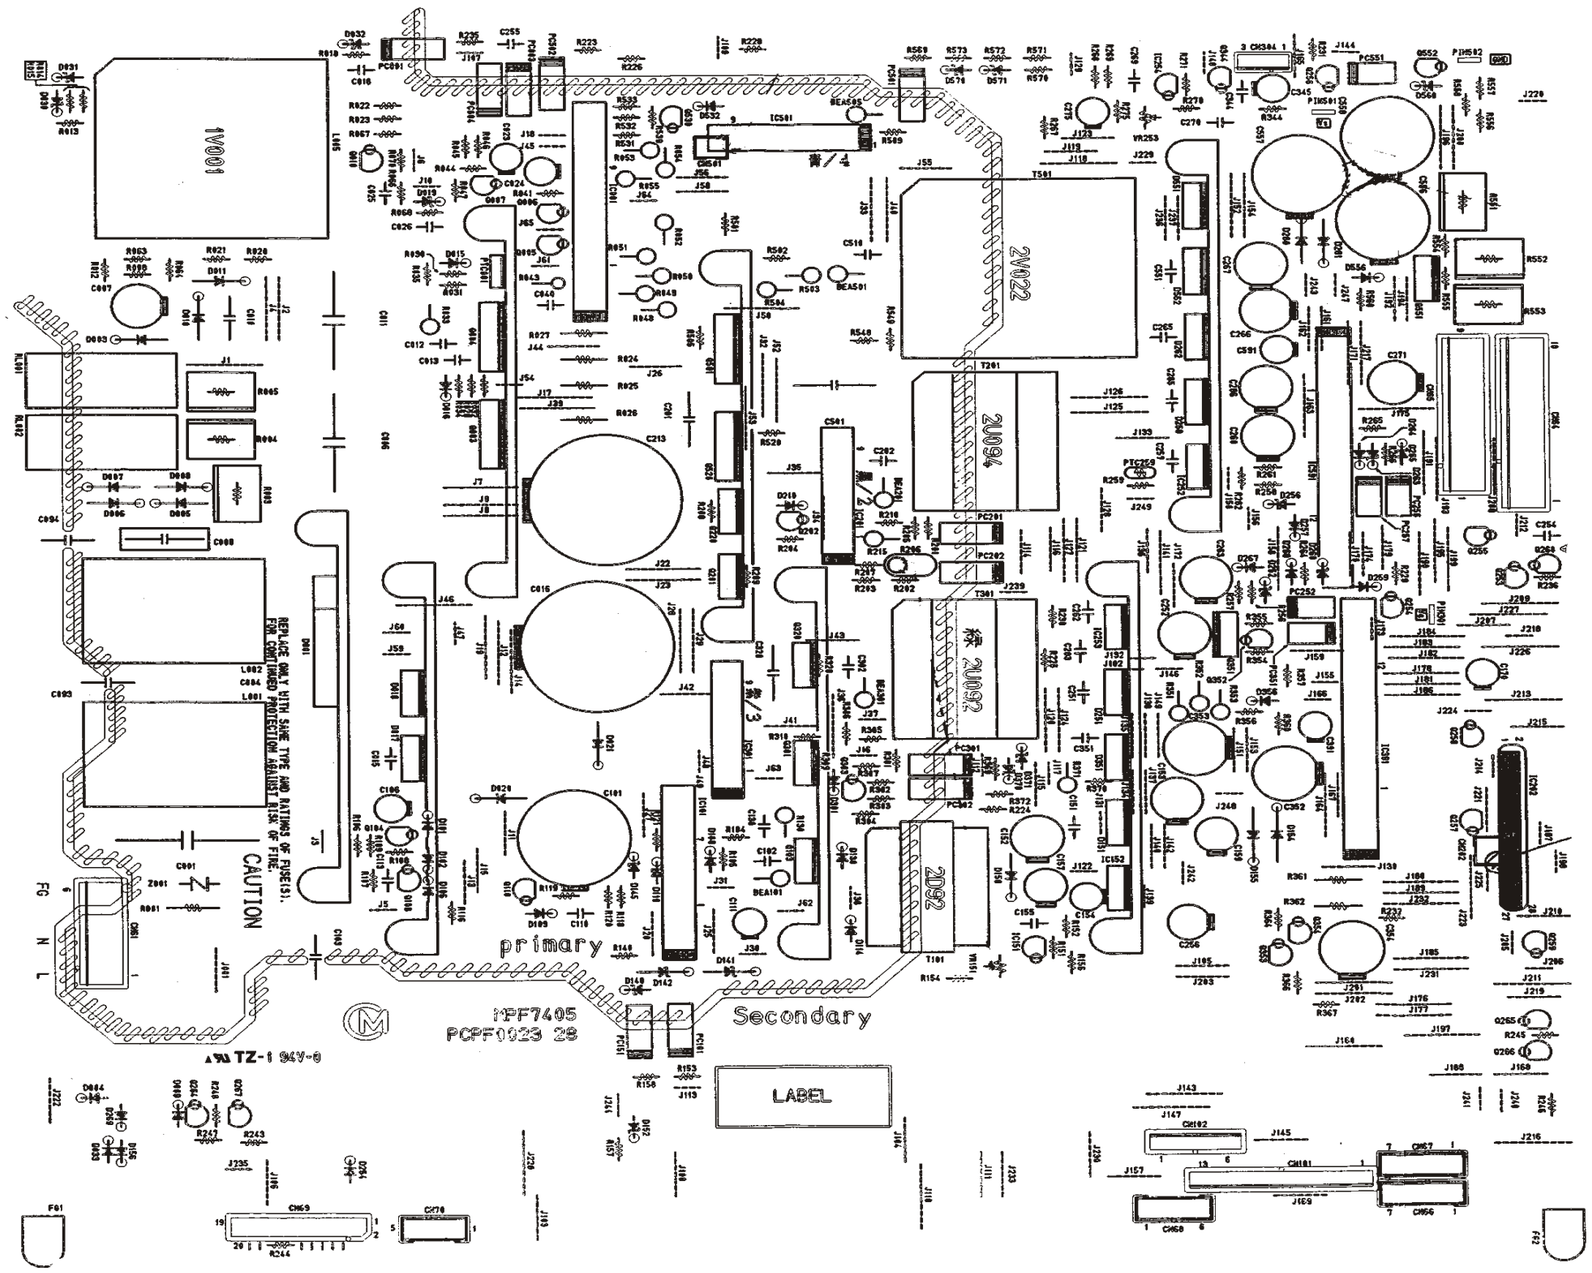

SM0064	Power Supply Circuit Board	HITACHI

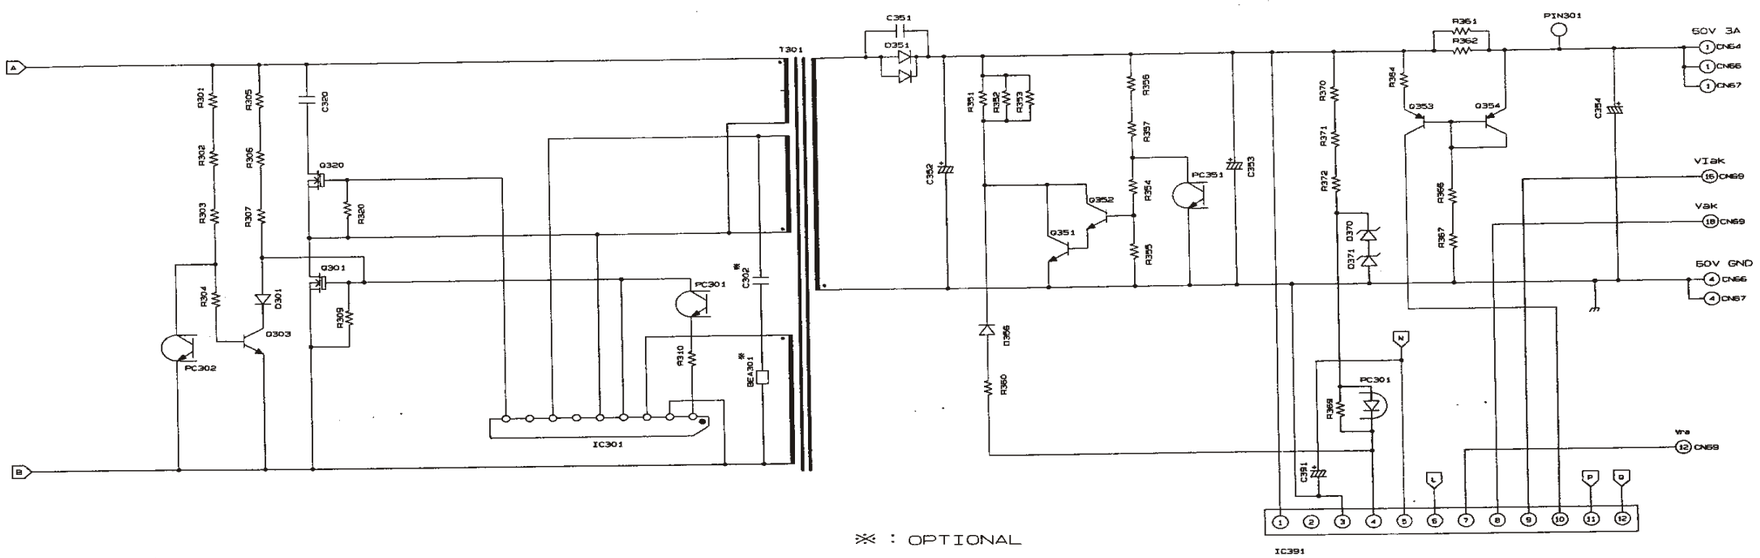

SM0064	Power Circuit Schematic - 1 of 5	HITACHI

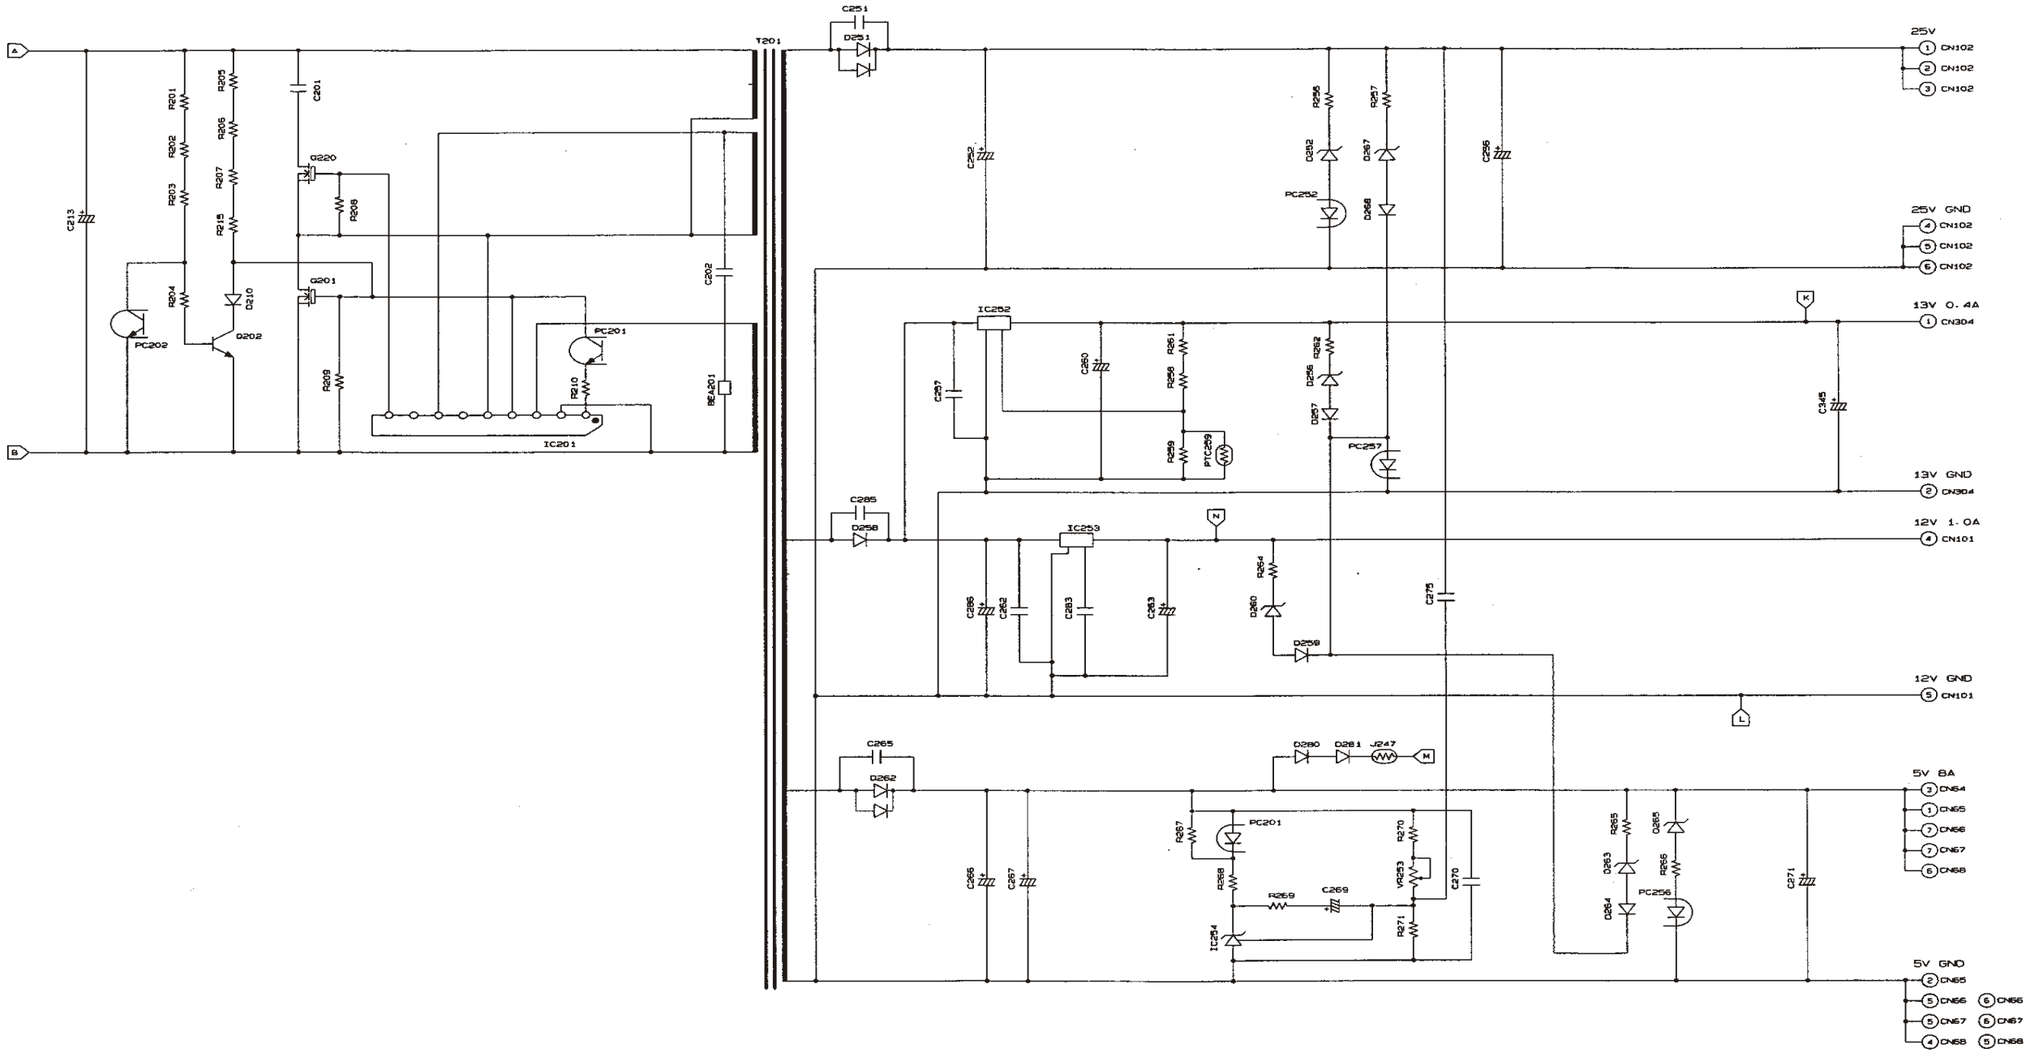

SM0064	Power Circuit Schematic - 2 of 5	HITACHI

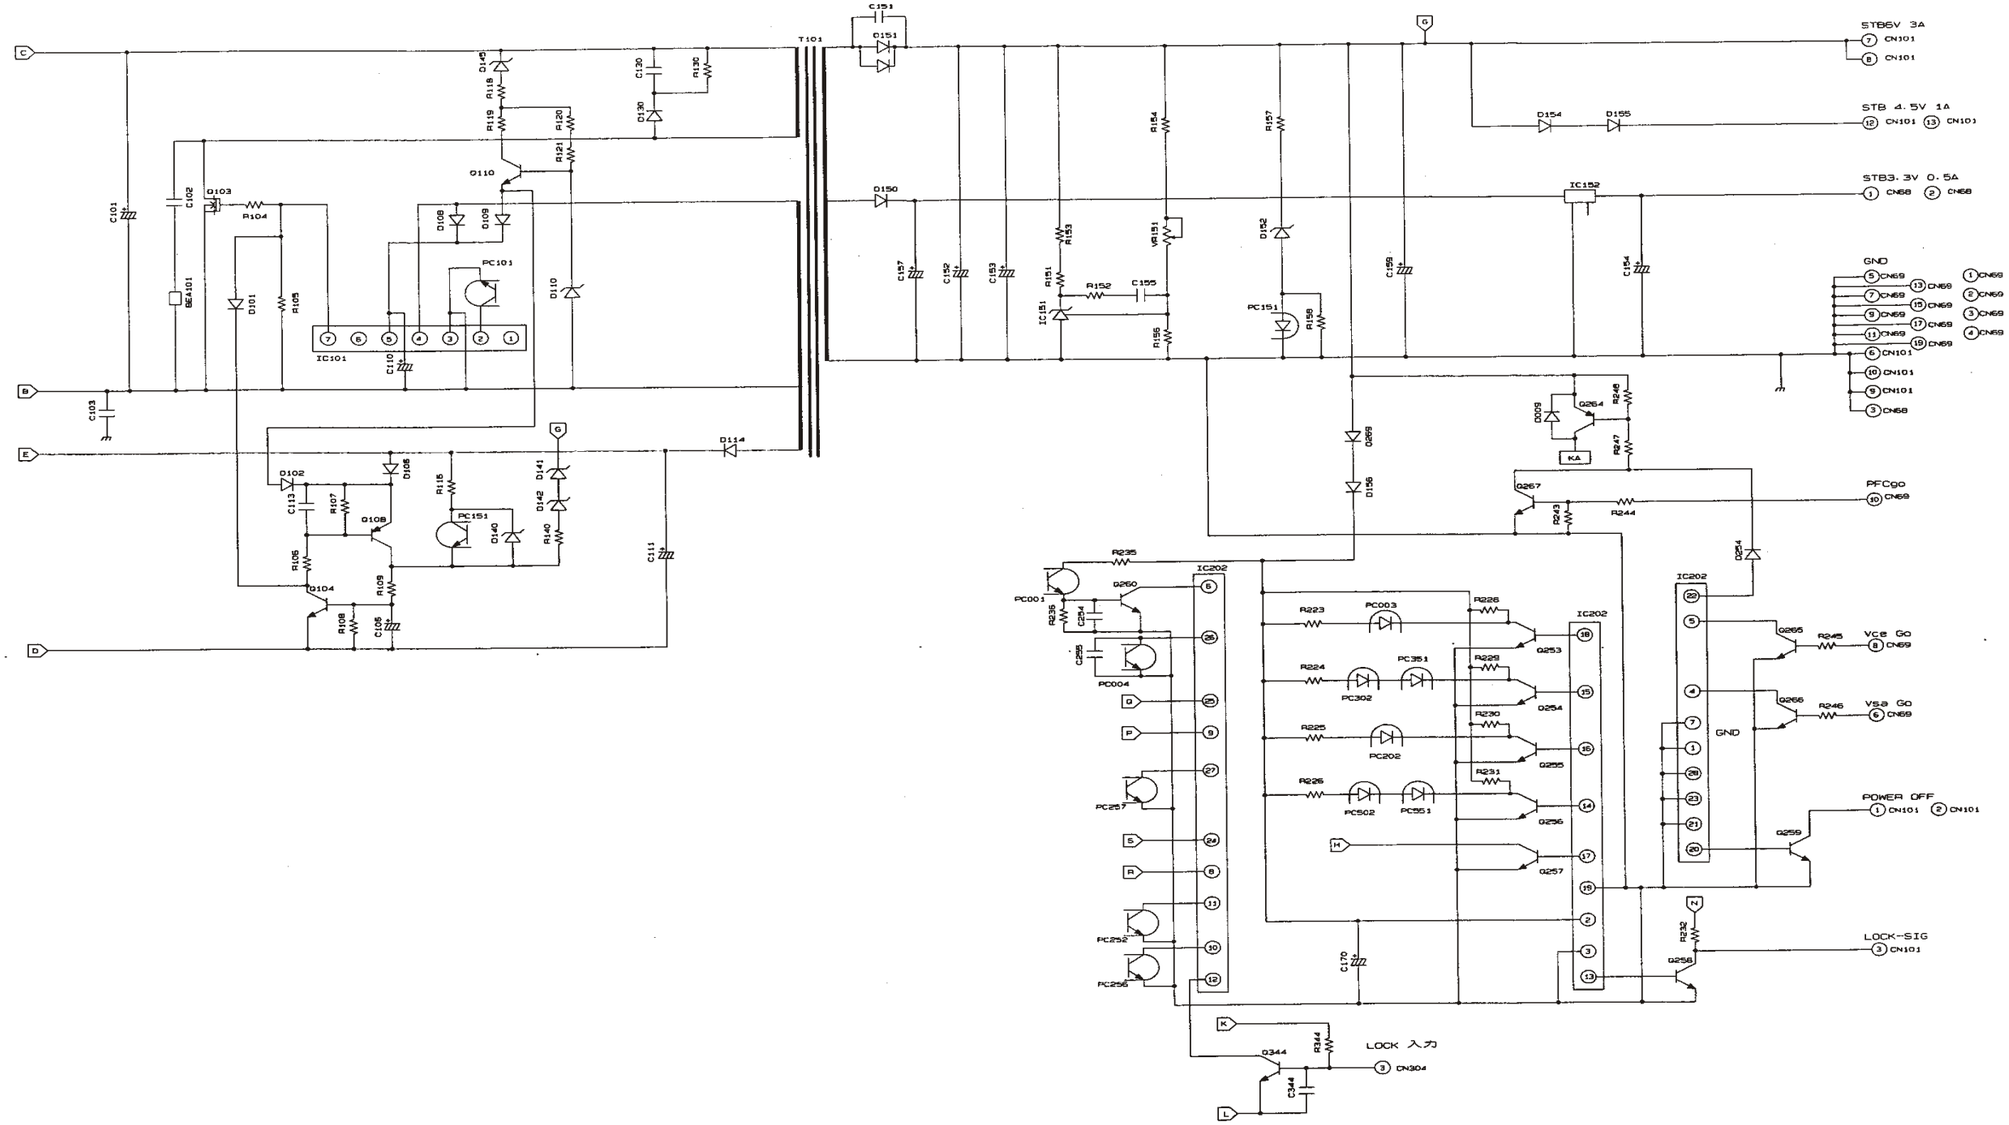

SM0064	Power Circuit Schematic 3 0f 5	HITACHI

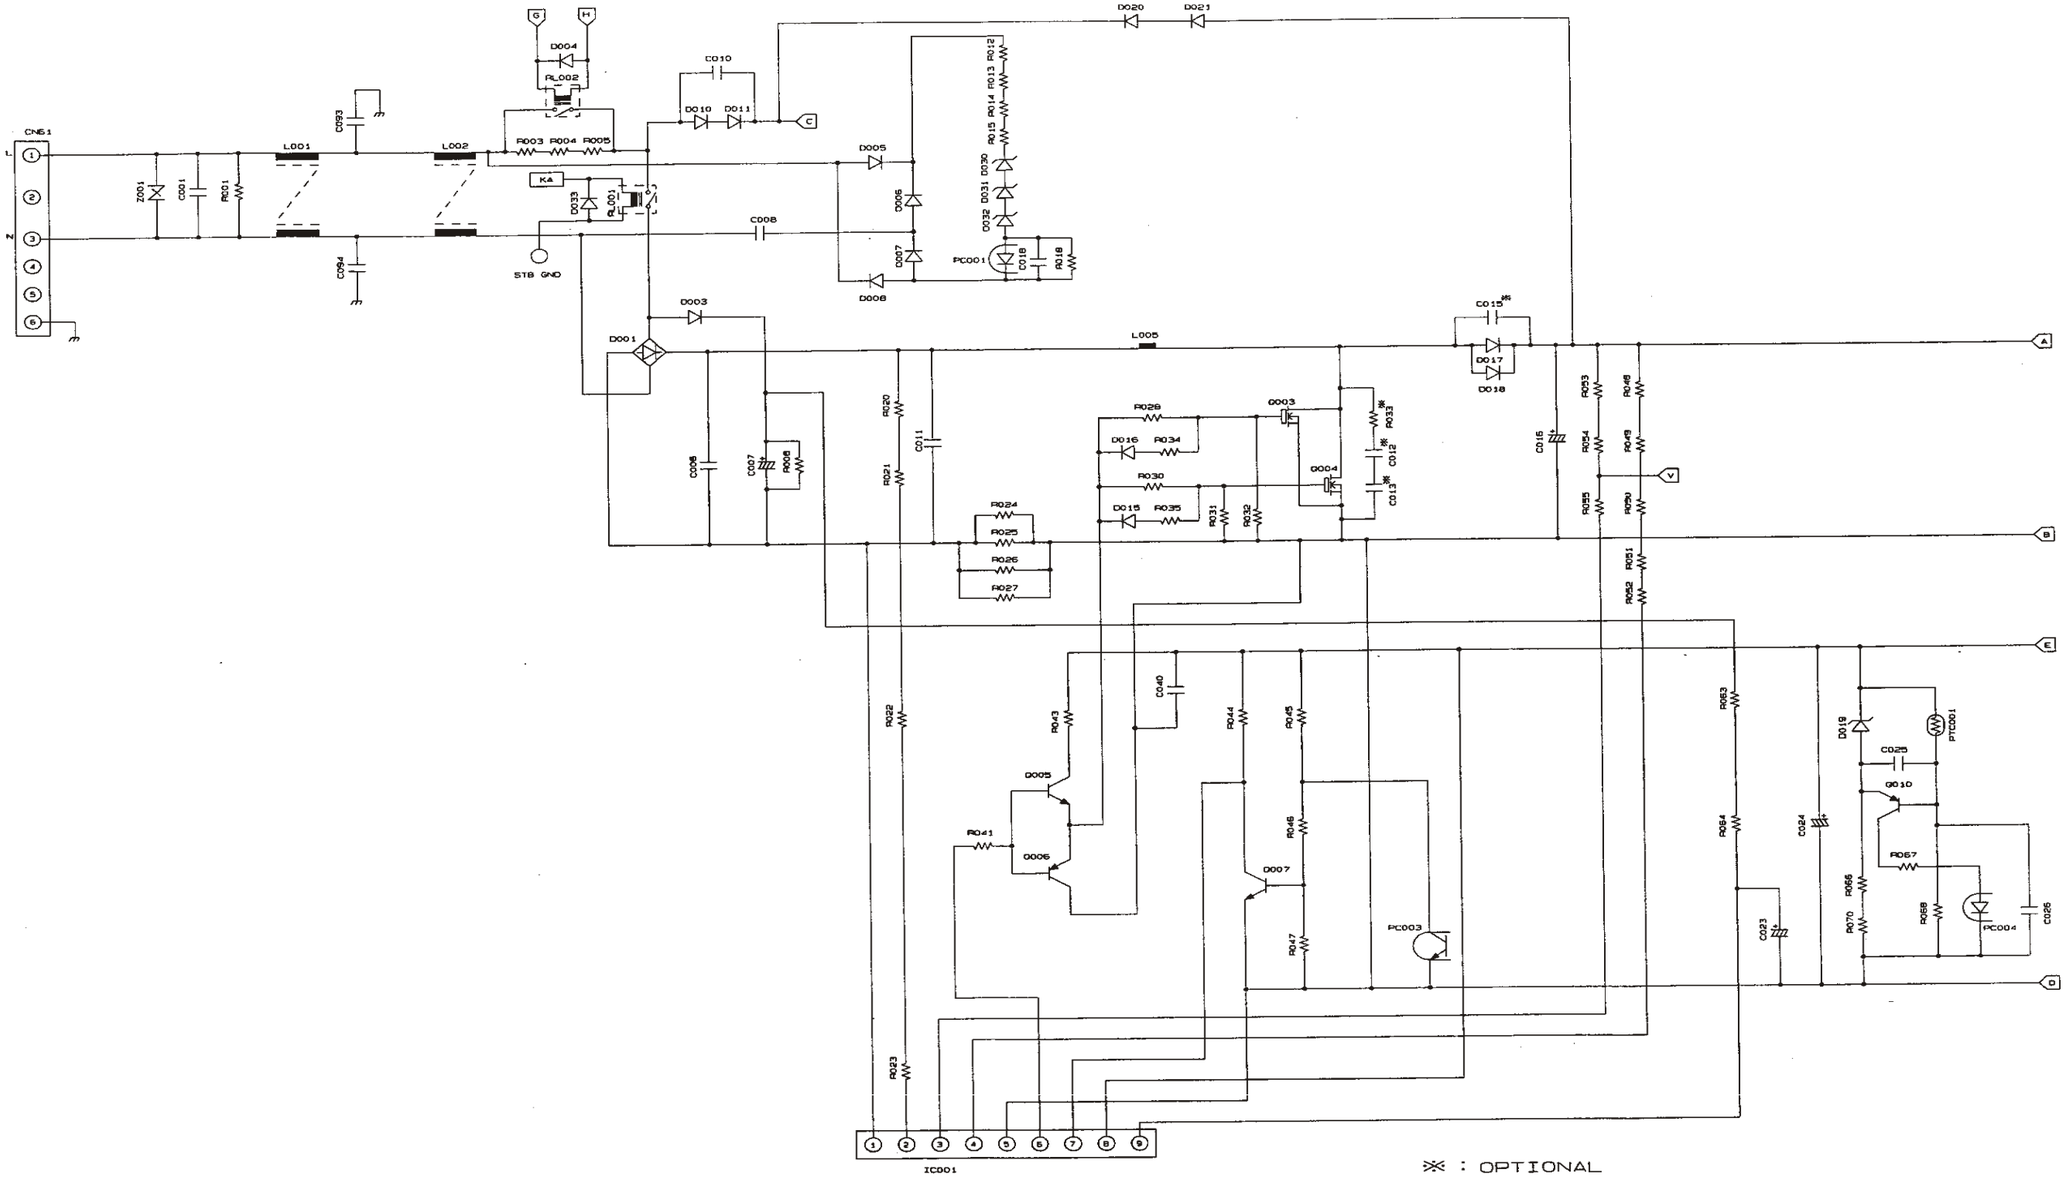

SM0064	Power Circuit Schematic - 4 of 5	HITACHI

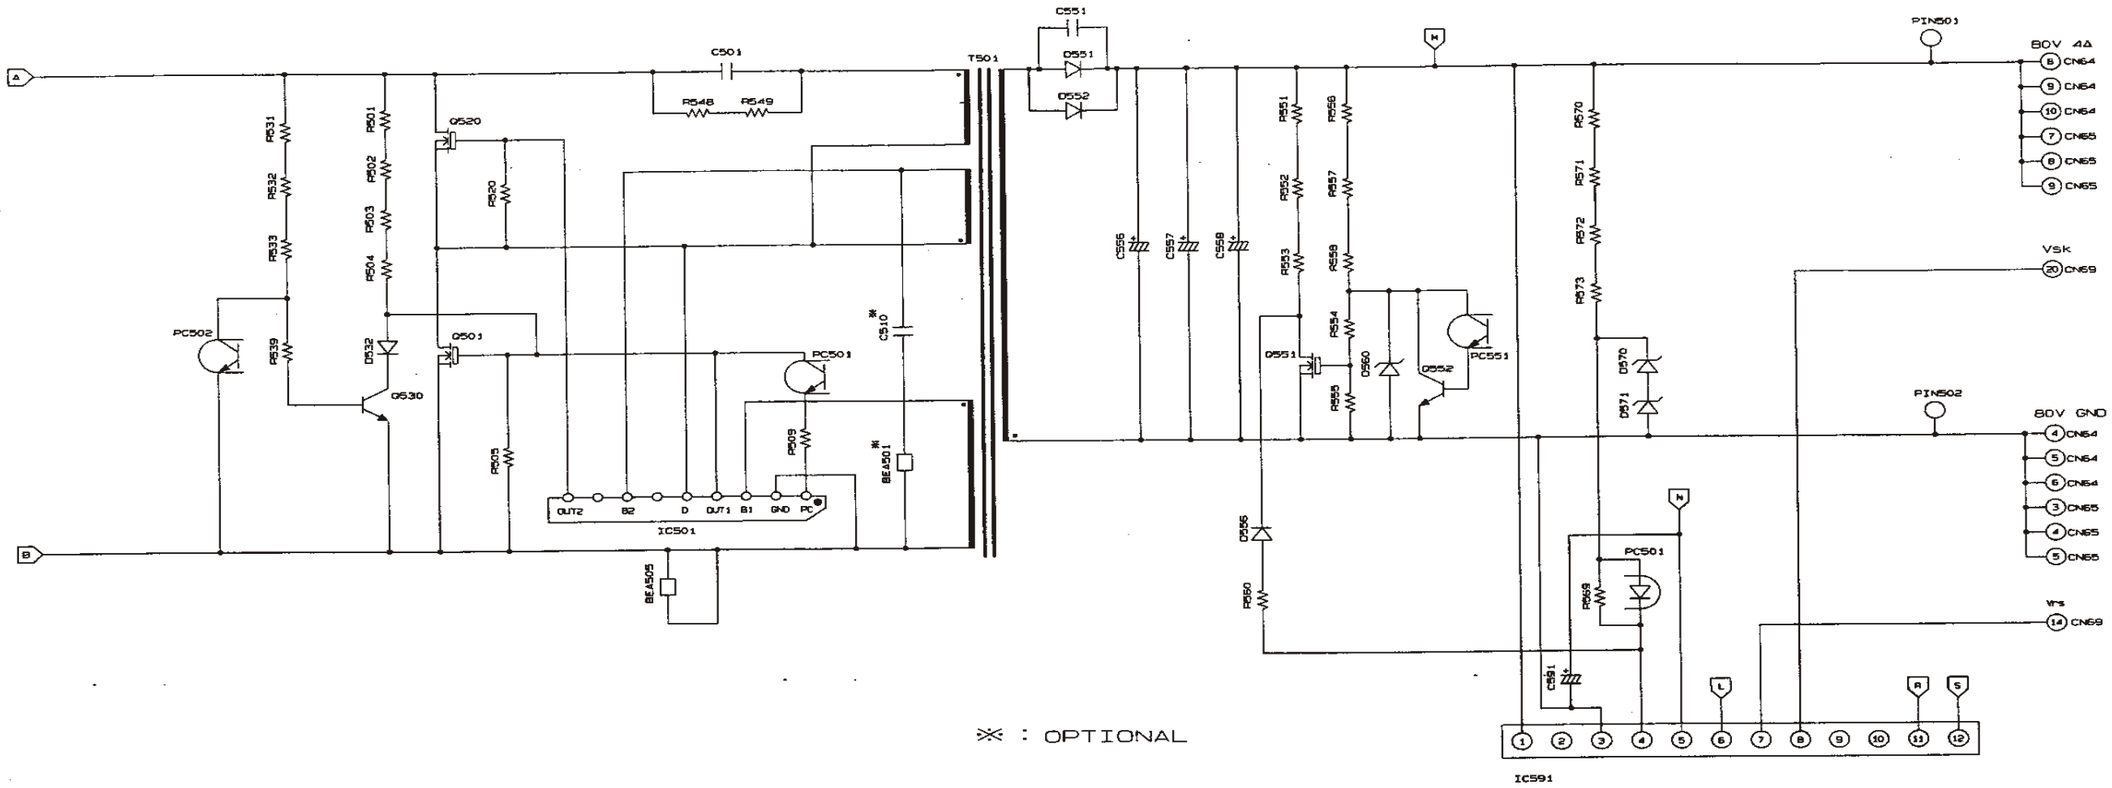

※ : OPTIONAL

SM0064	Power Circuit Schematic - 5 of 5	HITACHI

HITACHI

Hitachi, Ltd. Tokyo, Japan
International Sales Division
THE HITACHI ATAGO BUILDING,
No. 15 –12 Nishi Shinbashi, 2 – Chome,
Minato – Ku, Tokyo 105-8430, Japan.
Tel: 03 35022111

HITACHI EUROPE LTD,
Whitebrook Park
Lower Cookham Road
Maidenhead
Berkshire
SL6 8YA
UNITED KINGDOM
Tel: 01628 643000
Fax: 01628 643400
Email: **consumer-service@hitachi-eu.com**

HITACHI EUROPE S.A.
364 Kifissias Ave. & 1, Delfon Str.
152 33 Chalandri
Athens
GREECE
Tel: 1-6837200
Fax: 1-6835964
Email: **service.hellas@hitachi-eu.com**

HITACHI EUROPE GmbH
Munich Office
Dornacher Strasse 3
D-85622 Feldkirchen bei München
GERMANY
Tel: +49-89-991 80-0
Fax: +49-89-991 80-224
Hotline: +49-180-551 25 51 (12ct/min)
Email: **HSE-DUS.service@hitachi-eu.com**

HITACHI EUROPE S.A.
Gran Via Carlos III, 86, planta 5
Edificios Trade - Torre Este
08028 Barcelona
SPAIN
Tel: 93 409 2550
Fax: 93 491 3513
Email: **atencion.cliente@hitachi-eu.com**

HITACHI EUROPE srl
Via Tommaso Gulli N.39, 20147
Milano, Italia
ITALY
Tel: +39 02 487861
Tel: +39 02 38073415 Servizio Clienti
Fax: +39 02 48786381/2
Email: customerservice.italy@hitachi-eu.com

HITACHI Europe AB
Box 77 S-164 94 Kista
SWEDEN
Tel: +46 (0) 8 562 711 00
Fax: +46 (0) 8 562 711 13
Email: **csgswe@hitachi-eu.com**

HITACHI EUROPE S.A.S
Lyon Office
B.P. 45, 69671 BRON CEDEX
FRANCE
Tel: 04 72 14 29 70
Fax: 04 72 14 29 99
Email: **france.consommateur@hitachi-eu.com**

HITACHI EUROPE LTD (Norway) AB
STRANDVEIEN 18
1366 Lysaker
NORWAY
Tel: 67 5190 30
Fax: 67 5190 32
Email: **csgnor@hitachi-eu.com**

HITACH EUROPE AB
Egebækgård
Egebækvej 98
DK-2850 Nærum
DENMARK
Tel: +45 43 43 6050
Fax: +45 43 60 51
Email: **csgnor@hitachi-eu.com**

HITACHI EUROPE AB
Neopoli / Niemenkatu 73
FIN-15140 Lahti
FINLAND
Tel : +358 3 8858 271
Fax: +358 3 8858 272
Email: **csgnor@hitachi-eu.com**

Hitachi Europe Ltd
Bergensesteenweg 421
1600 Sint-Pieters-Leeuw
BELGIUM
Tel: +32 2 363 99 01
Fax: +32 2 363 99 00
Email: **sofie.van.bom@hitachi-eu.com**

HITACHI EUROPE LTD
Na Sychrove 975/8
101 27 Praha 10 – Bohdalec
CZECH REPUBLIC
Tel: +420 267 212 383
Fax: +420 267 212 385
Email: **csgnor@hitachi-eu.com**

www.hitachidigitalmedia.com